


MASTERYS GP4

10-40 kVA

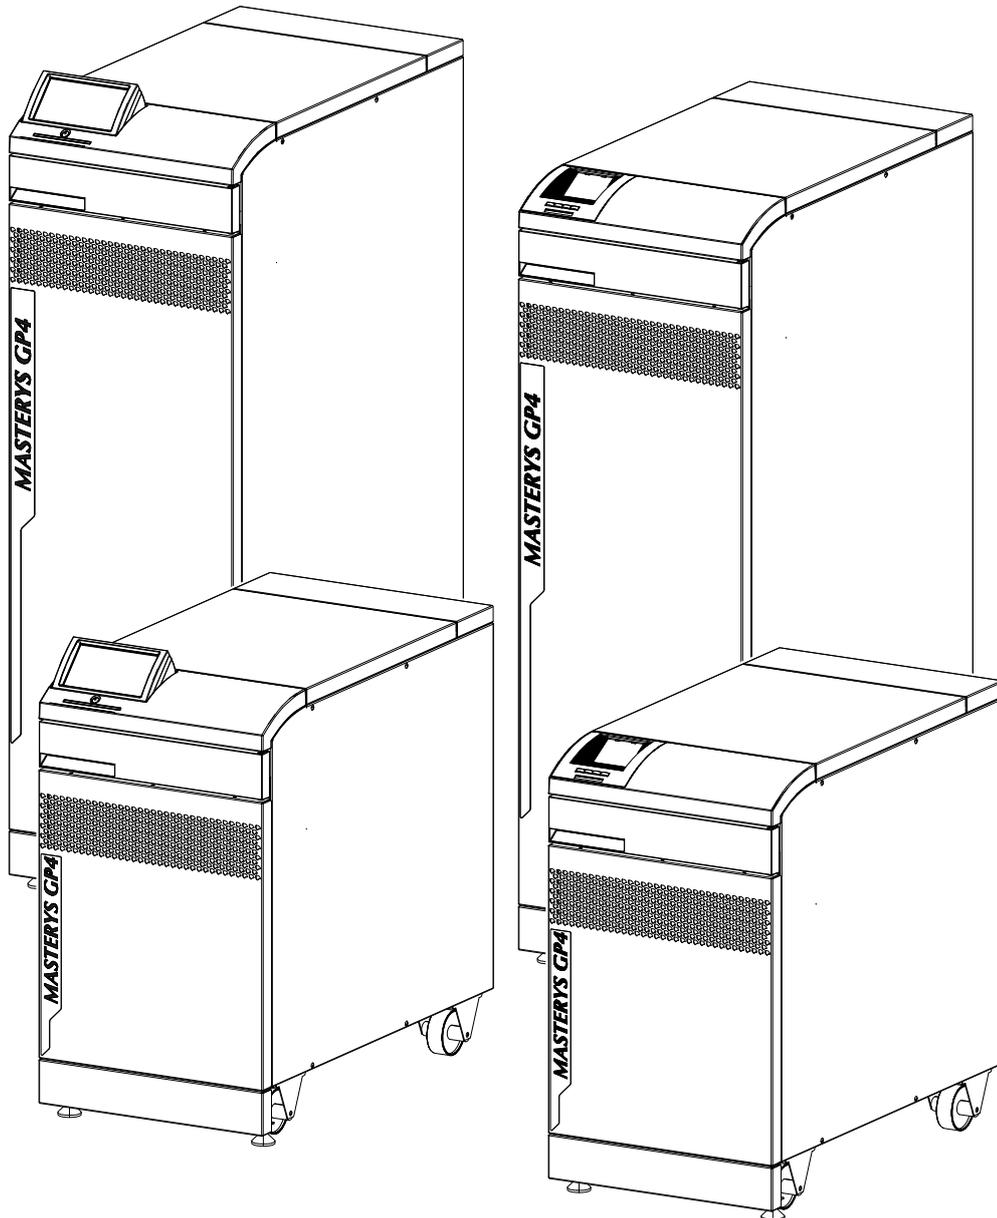

Available installation tutoring mobile app

Discover **eWIRE**



Free download from



Ask your Socomec dealer for your activation code. Visit us at www.socomec.com for more info. (tool page).

This Application is meant to support the User when installing the relevant SOCOMEC products in tutoring the installation step by step. The Application shall in no way substitute the installation and user manual provided with this SOCOMEC product, which remains the sole accurate instructions in terms of safety, handling, connection and use of SOCOMEC products.



NOTE!

On starting the unit an operating code is requested.

Before commencing operation, contact an authorised support centre to obtain the code, providing the unit serial number.

Note that for some options and/or configuration startup should be implemented by qualified technical personnel.

CONTENTS

1.	CERTIFICATE AND CONDITIONS OF WARRANTY	6
2.	SAFETY STANDARDS	7
2.1	DESCRIPTION OF SYMBOLS	9
3.	ENVIRONMENTAL REQUIREMENTS AND HANDLING	10
3.1	ENVIRONMENTAL REQUIREMENTS	10
3.2	HANDLING	11
4.	ELECTRICAL INSTALLATION	13
4.1	UPS SINGLE CONFIGURATION	13
4.1.1	MAINS AND AUXILIARY MAINS CONNECTED SEPARATELY (with external batteries)	13
4.1.2	MAINS AND AUXILIARY MAINS CONNECTED SEPARATELY (with internal batteries)	13
4.2	UPS PARALLEL CONFIGURATION	14
4.2.1	MAINS AND AUXILIARY MAINS CONNECTED SEPARATELY (with external batteries)	14
4.2.2	PARALLEL SETUP RULES	15
4.2.3	CONTROL CONNECTIONS	15
4.3	ELECTRICAL REQUIREMENTS	16
4.3.1	BACKFEED PROTECTION	18
4.4	CABLE POSITIONING	21
5.	OVERVIEW	22
5.1	RECOMMENDED CONFIGURATIONS	22
5.1.1	10-40 KVA WITH EXTERNAL BATTERY CABINET	22
5.2	FRONT VIEW	23
5.3	UPS SWITCHES	24
5.4	WIRING DIAGRAM	25
5.5	INTERNAL FRONT VIEW DETAILS	26
6.	CONNECTIONS	27
6.1	EARTH CONNECTION	27
6.2	UPS AND EXTERNAL BATTERY CONNECTION	28
6.3	COMPLETION OF THE INSTALLATION	31
7.	3.5" CONTROL PANEL	33
8.	MENU	34
8.1	DISPLAY OVERVIEW (SYSTEM)	34
8.2	DISPLAY OVERVIEW (UNIT)	34
8.3	MENU TREE	38
8.4	MENU FUNCTION DESCRIPTIONS	40
8.4.1	ENTERING PASSWORDS	40
8.4.2	ALARMS MENU	40
8.4.3	STATUS MENU	40
8.4.4	EVENT LOG MENU	40
8.4.5	MEASUREMENTS MENU	40
8.4.6	CONTROLS MENU	41
8.4.7	USER PARAM MENU	41
8.4.8	SERVICE MENU	41
9.	7" TOUCHSCREEN CONTROL PANEL	42
10.	DISPLAY OPERATION	43
10.1	DISPLAY DESCRIPTION	43
10.2	MENU ARCHITECTURE	44
10.3	FUNCTIONING MODE	47
10.4	STATUS	47
10.4.1	STATUS PAGE	47
10.5	ALARMS MANAGEMENT	48
10.5.1	ALARM REPORT	48
10.5.2	ALARM POPUP	48
10.5.3	ALARM PAGE	48
10.6	SYNOPTIC ANIMATION	49
10.6.1	ADDITIONAL ICONS	53
10.7	EVENT LOG PAGE	53

10.8	MENU FUNCTION DESCRIPTIONS	54
10.8.1	ENTERING PASSWORDS	54
10.8.2	MONITORING MENU	54
10.8.3	EVENTS LOG MENU	54
10.8.4	MEASUREMENTS MENU	54
10.8.5	CONTROLS MENU	54
10.8.6	UPS CONFIGURATION MENU	55
10.8.7	USER PARAM MENU	55
10.8.8	SERVICE MENU	55
10.9	ADDITIONAL USER FUNCTIONS	56
10.9.1	PHASE COLOR MODIFICATION	56
11.	OPERATING PROCEDURES	57
11.1	SWITCHING ON	57
11.2	SWITCHING OFF	57
11.3	BYPASS OPERATIONS	58
11.4	EXTENDED OUT OF SERVICE	59
11.5	EMERGENCY SHUTDOWN	59
12.	OPERATING MODES	60
12.1	ON LINE MODE	60
12.2	HIGH EFFICIENCY MODE	60
12.3	CONVERTER MODE	61
12.4	OPERATION WITH MAINTENANCE BYPASS	61
12.5	OPERATION WITH MOTOR GENERATOR (GENSET)	61
13.	STANDARD FEATURES AND OPTION	62
13.1	ADC+SL CARD	63
13.1.1	TEMPERATURE SENSOR	65
13.2	LIB-ADC CARD	66
13.3	NET VISION CARD	67
13.3.1	EMD	67
13.4	ACS CARD	67
13.5	MODBUS TCP CARD	67
13.6	BACNET CARD	67
13.7	TOUCHSCREEN DISPLAY	68
13.8	REMOTE TOUCHSCREEN DISPLAY	68
13.9	PROFIBUS PROTOCOL INTERFACE	68
13.10	SOFTWARE OPTION	68
13.11	INTERNAL BACKFEED PROTECTION	68
13.12	EXTERNAL MAINTENANCE BYPASS	68
13.13	KIT FOR COMMON MAINS	69
13.14	KIT FOR RECTIFIER NEUTRAL CREATION	69
13.15	KIT FOR TN-C / NEUTRAL-GROUND CONNECTION	70
13.16	REDUNDANT BYPASS VENTILATION	71
13.17	RAMP FOR UPS UNLOADING	71
13.18	KIT FOR FRONT AND LATERAL COVER	71
13.19	SEISMIC KIT	71
13.20	COLD START	71
14.	TROUBLESHOOTING	72
14.1	SYSTEM ALARMS	72
14.2	SYSTEM STATUS	73
15.	PREVENTIVE MAINTENANCE	74
15.1	BATTERIES	74
15.2	FANS & CAPACITORS	75
16.	SAFEGUARDING THE ENVIRONMENT	76
17.	TECHNICAL SPECIFICATIONS	77

1. CERTIFICATE AND CONDITIONS OF WARRANTY

This SOCOMEC continuous power system is guaranteed against any manufacturing or material defects.

The warranty is valid for 12 (twelve) months from the commission date, provided activation is carried out by SOCOMEC personnel or personnel from a support centre authorised by SOCOMEC, and no more than 15 (fifteen) months from being shipped from SOCOMEC.

The warranty is valid throughout national territory. If the UPS is exported abroad, the warranty will only cover the parts used to repair faults.

The warranty is valid ex-works and covers labour and parts used to repair the faults.

The warranty shall not apply in the following cases:

- Failure due to unforeseen circumstances or force majeure (lightning, floods, etc.);
- Failure due to negligence or improper use (use outside limits: temperature, humidity, ventilation, electric power supply, applied load, batteries);
- Insufficient or inappropriate maintenance;
- When maintenance, repairs or modifications have not been carried out by SOCOMEC personnel, or personnel from a support centre authorised by SOCOMEC.
- If the battery has not been recharged in accordance with the terms indicated on the packaging and in the manual, in the event of long periods of storage or UPS inactivity.

SOCOMEC may, at its own discretion, opt for the repair of the product or the replacement of faulty or defective parts with new parts, or with used parts of equivalent quality to new parts with regard to function and performance.

Defective or faulty parts replaced free of charge must be made available to SOCOMEC, which becomes the sole owner.

Replacement or repair of parts, or any modifications to the product during the warranty period, will not extend the duration of the warranty.

SOCOMEC will not be responsible for damages under any circumstances (including, without limitations, damage for loss of earnings, interruption of activity, loss of information or other financial losses) arising from the use of the product.

SOCOMEC retains the full and exclusive ownership rights to this document. Only a personal entitlement to use the document for the application indicated by SOCOMEC is granted to the recipient of this document. The reproduction, modification, distribution of this document, either partially or wholly and in any manner, is strictly prohibited except upon Socomec's express prior written consent.

This document is not a specification. SOCOMEC reserves the right to make any changes to the information provided without prior notice.

2. SAFETY STANDARDS

This user manual specifies installation and maintenance procedures, technical data and safety instructions for SOCOMEC. For further information visit the Socomec website: www.socomec.com.

	NOTE! Before carrying out any operations on the unit read the installation and operating manual carefully. Keep this manual safe for future reference.
	NOTE! Any work carried out on the equipment must be performed by skilled, qualified technicians.
	NOTE! The models are not available for all markets. Contact Socomec for further information.
	DANGER! Failure to observe safety standards could result in fatal accidents or serious injury, and damage equipment or the environment.
	CAUTION! If the unit is found to be damaged externally or internally, or any of the accessories are damaged or missing, contact SOCOMEC. Do not operate the unit if it has suffered a violent mechanical shock of any kind.
	NOTE! Install the unit in accordance with clearances in order to allow access to handling devices and guarantee sufficient ventilation (refer to 'Environmental requirements and handling' chapter).
	NOTE! Only use accessories recommended or sold by the manufacturer.
	NOTE! When the equipment is transferred from a cold to a warm place wait approx. two hours before putting the unit into operation.
	NOTE! When carrying out electrical installation, all standards applicable specified by the IEC, in particular IEC 60364, and the electricity supplier must be observed. All national standards applicable to batteries must be observed. For further information refer to 'Technical specifications' chapter.
	WARNING! Connect the protective earth (PE) conductor before making any other connections.
	DANGER! RISK OF ELECTRIC SHOCK! Before carrying out any operations on the unit (cleaning and maintenance performances, connection of appliances, etc.) disconnect all power sources.
	DANGER! RISK OF ELECTRIC SHOCK! After disconnecting all power sources wait approx. 5 minutes for the complete discharge of the unit.
	NOTE! The UPS may be powered from an IT distribution system with a neutral conductor.
	NOTE! Installing the equipment correctly guarantees the IP20 protection level
	NOTE! Any use other than the specified purpose will be considered improper. The manufacturer/ supplier shall not be held responsible for damage resulting from this. Risk and responsibility lies with the system manager.

	<p>CAUTION! A battery can present a risk of electrical shock and high short circuit current. The following precautions should be observed when working on batteries:</p> <ul style="list-style-type: none"> - Remove watches, rings or metal objects. - Use tools with insulated handles. - Wear rubber gloves and boots. - Do not lay tools or metal parts on top of the batteries. - Disconnect the charging source prior to connecting or disconnecting battery terminals. - Determine if battery is inadvertently grounded. If inadvertently grounded, remove source from ground. Contact with any part of grounded battery can result in electrical shock. The likelihood of such shock can be reduced if such grounds are removed during installation and maintenance (applicable to equipment and remote battery supplies not having a grounded supply circuit).
	<p>CAUTION! Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic.</p>
	<p>CAUTION! Do not dispose of batteries in a fire. The batteries may explode.</p>
	<p>WARNING! Care shall be taken not to wear clothes and footwear which may build up electro- static charge. Absorbing cloth moistened only with water shall be used for battery cleaning. Other cleaning agents may result in built up of static charge or may damage the battery cases.</p>
	<p>NOTE! Only use accessories recommended or sold by the manufacturer.</p>
	<p>NOTE! Batteries must only be replaced with batteries recommended or sold by the manufacturer. Batteries must only be replaced by qualified technicians.</p>
	<p>NOTE! The batteries are toxic waste. If the battery cabinet needs to be scrapped it is essential to entrust the equipment solely and exclusively to firms specialising in the disposal of the materials making up the system. These are obliged to break up and dispose of the various components in accordance with the legal provisions in force in the country where the system is installed.</p>
	<p>NOTE! The product you have chosen is designed for commercial and industrial use only. In order to be used for particular critical applications such as life support systems, medical applications, commercial transportation, nuclear facilities or any other application or system where product failure is likely to cause substantial harm to people or property, the products may have to be adapted. For such uses we would advise you to contact SOCOMEC beforehand to confirm the ability of these products to meet the requested level of safety, performance, reliability and compliance with applicable laws, regulations and specifications.</p>
	<p>WARNING! Only for 10 kVA 3/3 This is a category C2 UPS product. In a residential environment, this product may cause radio interference, in which case the user may be required to take additional measures. For other models: This is a product for commercial and industrial application in the second environment installation restrictions or additional measures may be needed to prevent disturbances.</p>

Safety requirements for secondary batteries and battery installations.

	<p>The installer is responsible for ensuring that the battery installation and their operating environment conform to national and international codes and safety standards.</p>
	<p>The installer is responsible for implementing the backfeed protection with the use of AC input line insulation devices external to the UPS and add the provided warning labels to all the mains power disconnecting switches installed at a distance from the UPS area; this serves to remind technicians of the fact that the circuit is connected to a UPS. Refer to 'Electrical requirements' chapter.</p>

2.1 Description of symbols

Symbols	Description
	Protective earth terminal (PE).
	Authorized personnel only. Only qualified personnel are permitted to work on the batteries.
	Do not use naked flames or cause sparks in the vicinity of the accumulators.
	No smoking.
	Batteries charging! Batteries and related parts contain lead which is dangerous to health if ingested. Wash hands after handling!
	Accumulators are heavy! Use suitable transport and lifting equipment to work safely.
	Risk of electric shock! Connecting accumulators in series creates hazardous voltages.
	Risk of explosion! Avoid short circuits! Never place tools or metal objects on the accumulators.
	Corrosive liquids (electrolyte).
	Read the user instructions carefully. Read the user manual before performing any operations.
	Wear protective gloves
	Wear safety shoes.
	Wear protective goggles.
	In the event of accidents, improper use, failure or electrolyte leakage wear a protective apron.
	In the event of accidents, improper use, failure or electrolyte leakage wear a gas mask.
	In the event of contact with the eyes, wash immediately with plenty of water and call a doctor. Call a doctor immediately in the event of accidents or illness.
	Do not dispose of in normal waste stream (symbol waste electrical and electronic equipment).

3. ENVIRONMENTAL REQUIREMENTS AND HANDLING



NOTE!

Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.

3.1 Environmental requirements

The room must be:


- of a suitable size
- free from conductive, inflammable and corrosive items;
- not exposed directly to sunlight.

The floor must support the weight of the unit and guarantee its stability. The unit is designed for indoor installation only.

Room positioning

For information regarding ambient temperature, dimensions and weights refer to the 'Technical specifications' chapter. The connections need to be accessible from the rear; a space of at least 1.5 meters should be left at the front of the UPS for maintenance purposes. It is also advisable to ensure that cable connections are sufficiently long and flexible so that the unit can be extracted during maintenance, if necessary.


A space at least 20 cm must be left at the back for adequate ventilation (see figure).

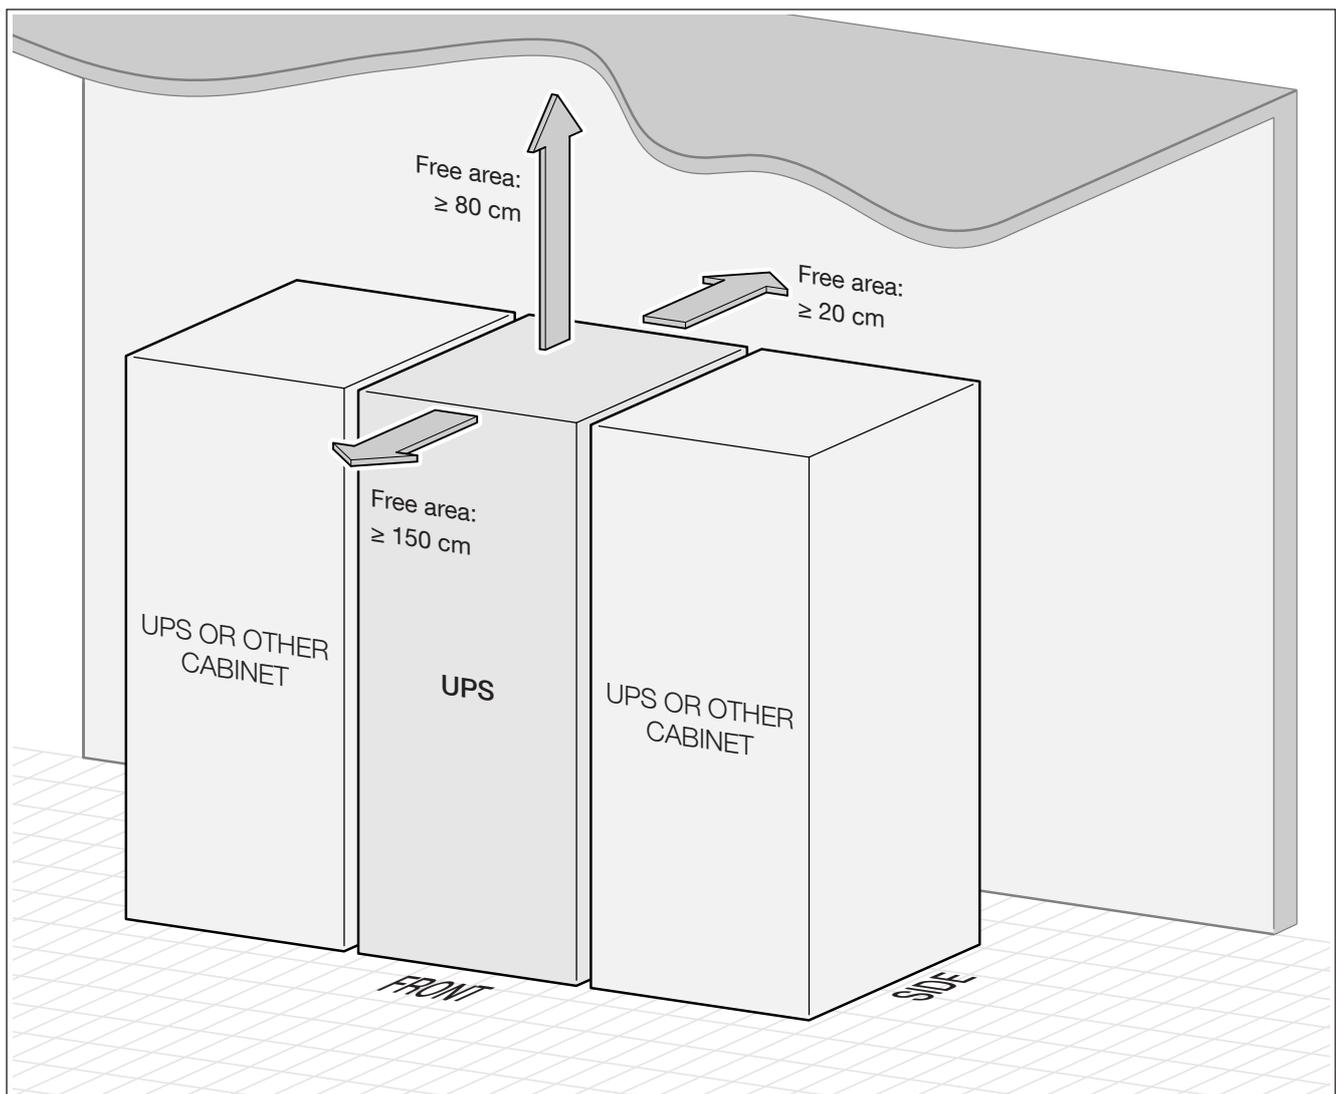






3.2 Handling

- The packaging guarantees the stability of the unit during shipping and physical transfer.
- The unit must remain in a vertical position during all shipping and handling operations.
- Ensure that the floor is strong enough to support the weight of the unit.
- Carry the packaged unit as close as possible to the installation site.

	WARNING! HEAVY WEIGHT! Move the unit using a fork lift truck taking the utmost caution at all times.
	The unit MUST be handled by at least two people. The people MUST take position at the sides of the UPS with respect to the direction of movement.
	Do not move the unit by pushing the front door.
	When moving the unit on even slightly sloping surfaces, use the locking equipment and braking devices to ensure that the unit does not fall over.
	WARNING! The following instructions must be carried out prior to moving the unit (after initial positioning). Failure to heed this warning could result in the unit falling over, equipment damage, injury and even death.
	Always use stabiliser bars if provided (see diagram below).

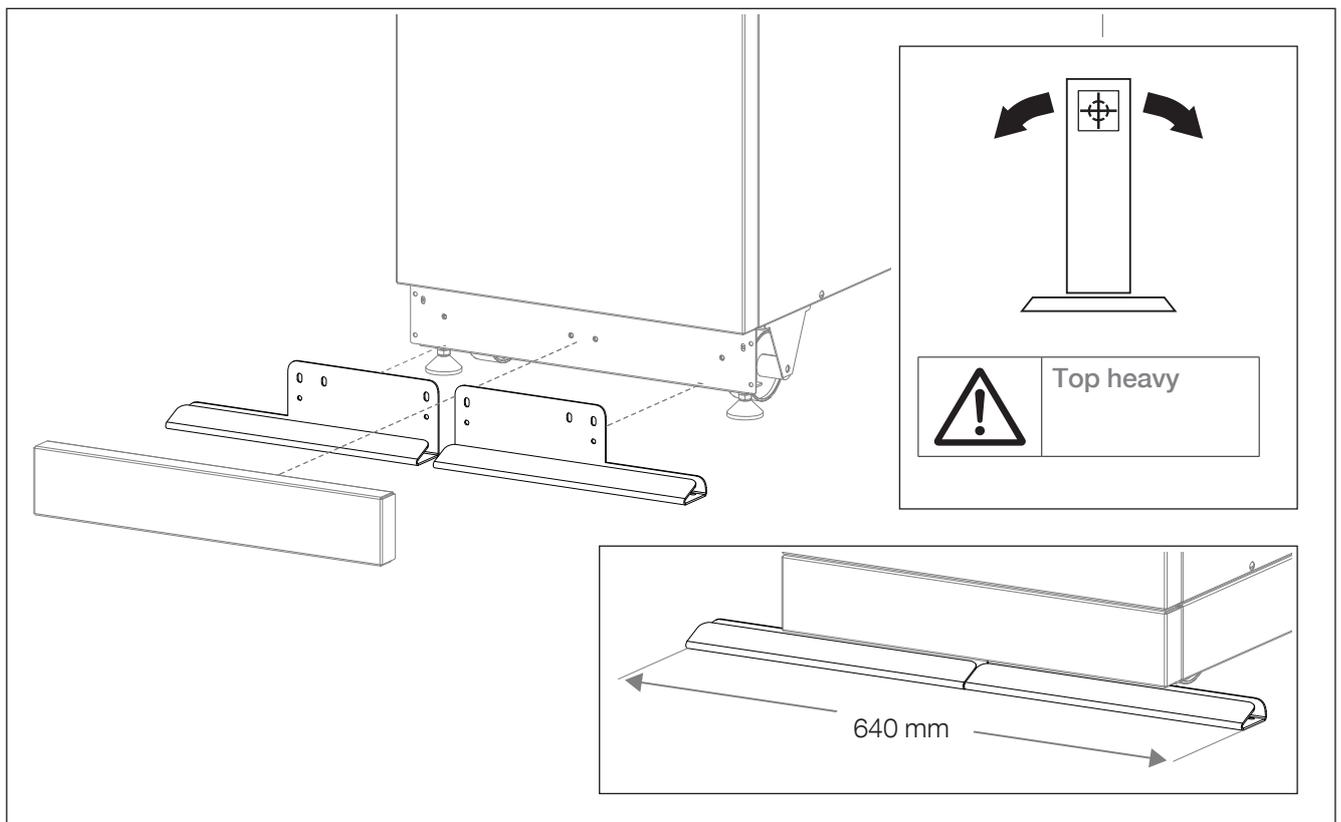


Unpacking procedures

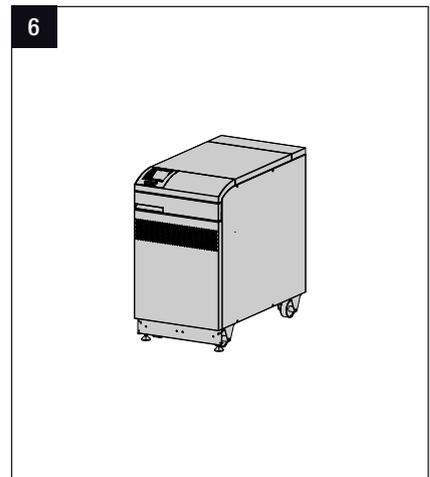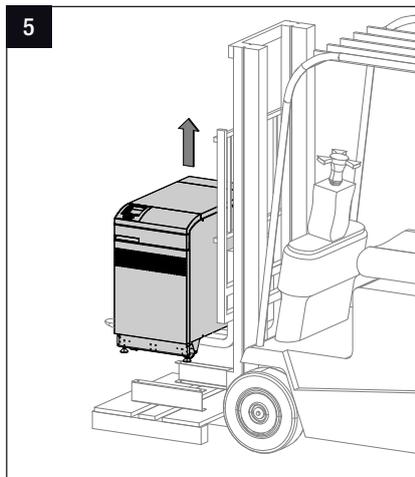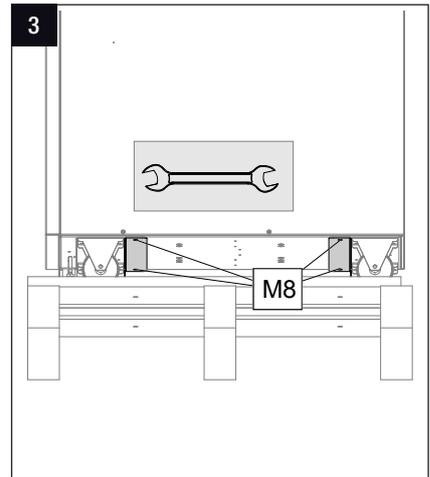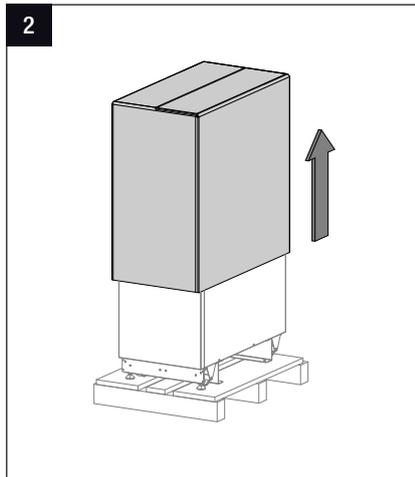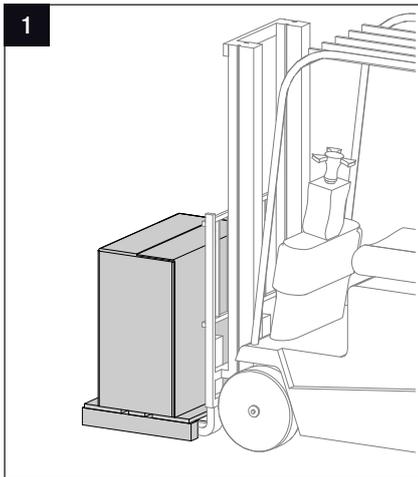

4. ELECTRICAL INSTALLATION

4.1 UPS single configuration

4.1.1 Mains and Auxiliary mains connected separately (with external batteries)

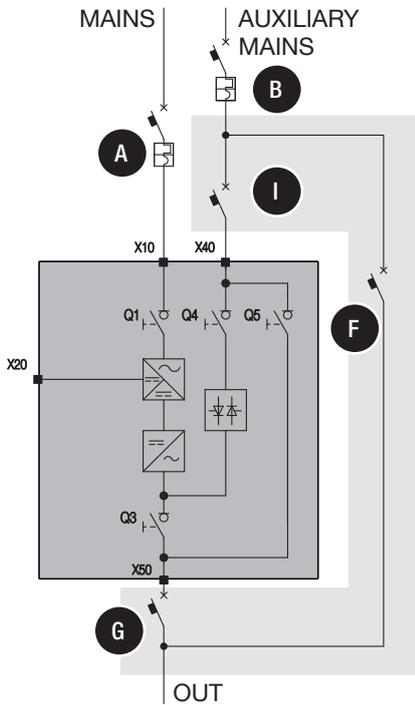


KEY

- A** Input mains thermal-magnetic circuit breaker.
- B** Auxiliary mains thermal-magnetic circuit breaker.
- F** External maintenance bypass switch⁽¹⁾.
- G** Unit output switch.
- I** Unit Auxiliary mains switch.
-  UPS
-  External maintenance bypass⁽²⁾

1. Connect a normally-closed early make contact from the External Maintenance bypass switch to the dedicated connector (if present) or to the ADC+SL board.
2. See 'Standard features and option' chapter.

4.1.2 Mains and Auxiliary mains connected separately (with internal batteries)

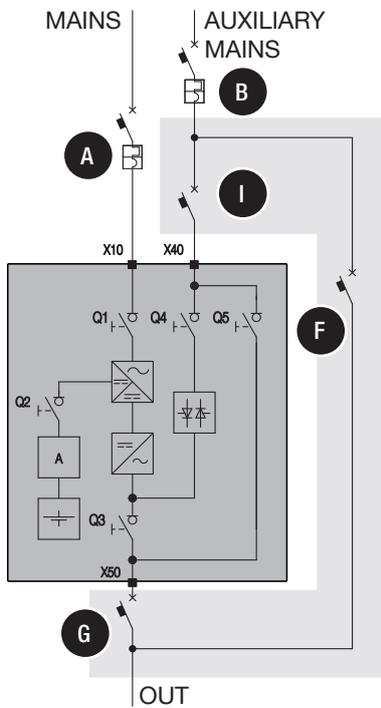


KEY

- A** Input mains thermal-magnetic circuit breaker.
- B** Auxiliary mains thermal-magnetic circuit breaker.
- F** External maintenance bypass switch⁽¹⁾.
- G** Unit output switch.
- I** Unit Auxiliary mains switch.
-  UPS
-  External maintenance bypass⁽²⁾

1. Connect a normally-closed early make contact from the External Maintenance bypass switch to the dedicated connector (if present) or to the ADC+SL board.
2. See 'Standard features and option' chapter.

4.2 UPS Parallel configuration

4.2.1 Mains and Auxiliary mains connected separately (with external batteries)

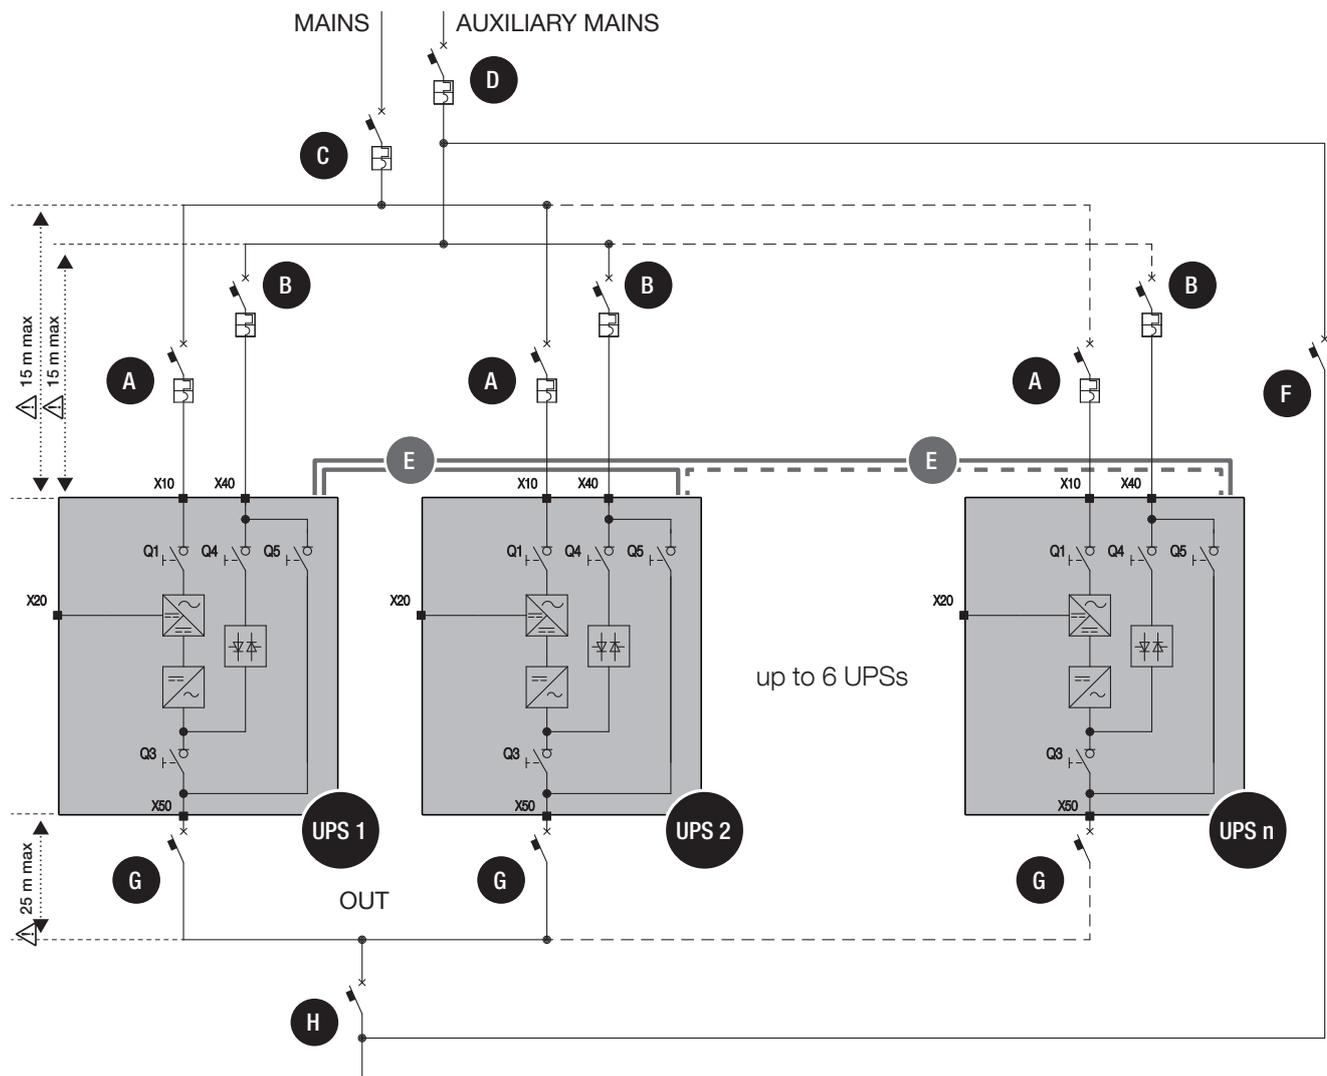

KEY

- | | |
|---|--|
| A Unit Input mains thermal-magnetic circuit breaker. | E Parallel bus cable. |
| B Unit Auxiliary mains thermal-magnetic circuit breaker. | F External maintenance bypass switch ⁽¹⁾ . |
| C Input mains thermal-magnetic circuit breaker. | G Unit output switch ⁽²⁾ . |
| D Auxiliary mains thermal-magnetic circuit breaker. | H System shutdown switch ⁽³⁾ . |

1. If an external maintenance bypass switch **F** is present, it is advisable to connect a normally closed early make contact from the switch to the parallel board of the concentrator unit.

2. If unit output switches **G** are present, it is advisable to connect a normally open early break contact from the switch to the unit's parallel board.

3. If a system shutdown switch **H** is present, it is advisable to connect a normally open early break contact from the switch to the parallel board of the concentrator unit.

4.2.2 Parallel setup rules

In order to achieve the best performance in a parallel configuration ensure that the mains input, output and auxiliary input cables:

- Have the same length (maximum length range is $\pm 5\%$).
- Are as short as possible.
- Are not longer than 15 metres.
- Are arranged evenly and not wrapped in coils. Cabling must be the same for each UPS in parallel.

	WARNING! In a parallel system it is necessary to oversize the auxiliary input cables at least 20% more than the rated value, due to the auxiliary input current balance tolerances.
	Only units with the same power rating (nominal apparent power and nominal active power) can be connected in parallel. See chapter 15

4.2.3 Control connections

Control cables **E** are required for units connected in a parallel configuration.

The control cables are supplied with the UPS in the case of standard parallel arrangements, or attached to the parallel kit if the system is upgraded at a later date.

The control cables supplied allow a maximum distance of about 1-2 meter between the UPS units.

Furthermore, every individual unit must read the status of its output switch, and one of the two units, known as the concentrator, must read the status of the external manual bypass of the system **F** and the status of the output switch of the system **H**.

Parallel configuration must only be activated by qualified SOCOMEC personnel; in each case arrange the control cables in the relevant cable run as shown in the diagram, leaving the connector(s) unconnected (one incoming and one outgoing control cable must be used).

4.3 Electrical requirements



NOTE!

Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.

The installation and system must comply with national plant regulations.

The electrical distribution panel must have a sectioning and protection system installed for input and auxiliary mains.

Residual Current Detection (RCD) is not necessary when the UPS is installed in a TN-S system.

RCD is not allowed on TN-C systems.

If a RCD is required a B-type should be used.

Size of input protection devices						
In/Out phase	Model rating	Input Mains Breaker ⁽¹⁾	Auxiliary Mains Breaker ⁽¹⁾	Differential input		Battery protection ⁽⁴⁾
	(kVA)	(A)				
		A	B	Selective type		Fuse type aR
Single unit	Parallel (n) (n=1 up to 6)					
3/1	10	25	63	0.5	0.5*n	32
	15	32	100	0.5	0.5*n	40
	20	40	125	0.5	0.5*n	50
3/3	10	25	25	0.5	0.5*n	32
	15	32	32	0.5	0.5*n	40
	20	40	40	0.5	0.5*n	50
	30	63	63	0.5	0.5*n	80
	40	80	80	0.5	0.5*n	100

Cable core size ⁽²⁾						
In/Out phase	Model rating	Input	Auxiliary	Output	Battery	⊕
	(kVA)	(mm ²)				
		Max ⁽³⁾				
3/1	10	25	50	50	50	M8
	15	25	50	50	50	M8
	20	25	50	50	50	M8
3/3	10	25	25	25	50	M8
	15	25	25	25	50	M8
	20	25	25	25	50	M8
	30	50	50	50	50	M8
	40	50	50	50	50	M8

M8 terminals | Tightening torque 20 Nm

25 mm² | Tightening torque 3 Nm

50 mm² | Tightening torque 5 Nm

1. Circuit breaker switch recommended with magnetic intervention threshold curve C. It is necessary to use a D curve selective breaker if an optional external transformer is used.
2. **For parallel configuration**, cables shall have the same size and length for each unit (maximum length tolerance is ±5%).
3. Determined by the size of the terminals. The minimum cross-section of the neutral cable must be at least equal to active poles (L1-L2-L3).
4. Tripole protection on external battery cabinet.
Recommended values to avoid unwanted tripping with UPS at full power, minimum battery voltage and backup time of at least 5 min. Recommended Rapid fuse type or thermal-magnetic circuit breaker with intervention threshold = 3 In suited for DC applications.

	<p>CAUTION: Residual Current Detection (RCD) can only be used in the case of a common input and auxiliary mains (configuration not recommended). It has to be placed upstream of the connection between input mains and auxiliary mains. If RCD is installed the trigger value must be 0.5 A multiplied by the number of units connected in parallel.</p> <p>Use type B four-pole selective (S) residual current detectors. Load leakage currents are to be added to those generated by the UPS and during transitory phases (power failures and power returns) short current peaks may occur. If loads with high leakage current are present, adjust the residual current protection. It is advisable in all cases to carry out a preliminary check on the earth current leakage with the UPS installed and operational with the definitive load, so as to prevent the RCD tripping over.</p>
	<p>Ensure personal protection against indirect contact, bearing in mind that there is RCD protection with a high trigger current upstream of the UPS units, as recommended above.</p>
	<p>NOTE:</p> <p>To ensure the integrity of the 10-15-20 kVA 3/1 bypass thyristors, I^2t must be lower than 14400 A²s and peak current must be lower than 2.4 kA for 10 ms.</p> <p>To ensure the integrity of the 10-15-20 kVA 3/3 bypass thyristors, I^2t must be lower than 7200 A²s and peak current must be lower than 1.2 kA for 10 ms.</p> <p>To ensure the integrity of the 30-40 kVA 3/3 bypass thyristors, I^2t must be lower than 15000 A²s and peak current must be lower than 2 kA for 10 ms.</p> <p>Contact SOCOMEC for detailed information.</p>
	<p>The UPS is designed for transient overvoltages in category II installations. If the UPS is part of the building's electrical circuit, or is likely to be subject to transient overvoltages in category III installations, additional external protection must be provided, either on the UPS or in the AC power supply network powering the UPS.</p>
	<p>The UPS is designed for indoor environmental service conditions according to IEC 60721-3-3 with pollution degree lower or equal to 2 (non-conductive pollution).</p>
	<p>WARNING: protective earthing conductor (PE) must have sufficient current-carrying capacity. The PE cable core size must be chosen according to the PROTECTIVE CURRENT RATING of the earth circuit which depends on the provision and location of protective overcurrent devices.</p>
	<p>NOTE: 3-Phase 4-Wire Input Power is required.</p> <p>The unit can be installed in TN-C, TN-S, TT and IT AC distribution systems (IEC 60364-3).</p>
	<p>In the standard configuration, the UPS does not modify the type of electrical supply system where it is connected. Then the same system will supply to both the load and the battery cabinets, if any.</p>

Additional requirements for parallel configuration


	<p>The UPS is designed for transient overvoltages in category II installations. If the UPS is part of a parallel configuration and the total output rated current is > 400 A, additional external protection must be provided.</p>
	<p>The phase rotation of auxiliary mains and output cables must be the same for each unit.</p>
	<p>System shutdown switch H should always be installed in the external distribution cabinet and recognised as an emergency shutdown switch (red handle). If this switch is far from the UPS or in another room a remote shutdown button shall be installed near the UPS.</p>
	<p>Before turning on an individual unit ensure that the relevant unit output switch G is closed.</p>
	<p>Before opening unit output switch G ensure that the relevant unit is turned off.</p>

4.3.1 Backfeed protection


The UPS is set up for the installation of external protection devices against the backfeed of dangerous voltages, on both the input power supply line (MAINS SUPPLY) and on the auxiliary backup mains power supply line (AUXILIARY MAINS SUPPLY); these devices are controlled by means of the card shown in figure.

The current rating of the switching device has to follow the instruction outlined in 'Electrical requirements' chapter.

	<p>DANGER! RISK OF ELECTRIC SHOCK! The installer must attach the warning label in order to warn electrical technicians about dangerous backfeed situations (not caused by the UPS).</p>
---	---
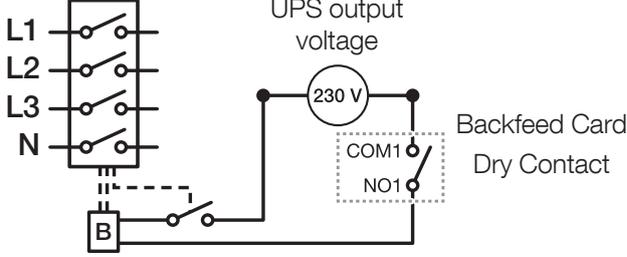
<p>Warning label (supplied with the equipment)</p> <div style="border: 1px solid black; padding: 10px; margin: 10px auto; width: 80%;"> <p style="text-align: center;">Before working on this circuit</p> <ul style="list-style-type: none"> - Isolate the Uninterruptible Power System (UPS) - Then check for Hazardous Voltage between all terminals including the protective earth <div style="text-align: center;">  <p>Risk of Voltage Backfeed</p> </div> </div>	<p>Backfeed electrical diagram</p> 
---	---

Backfeed trip coils supply

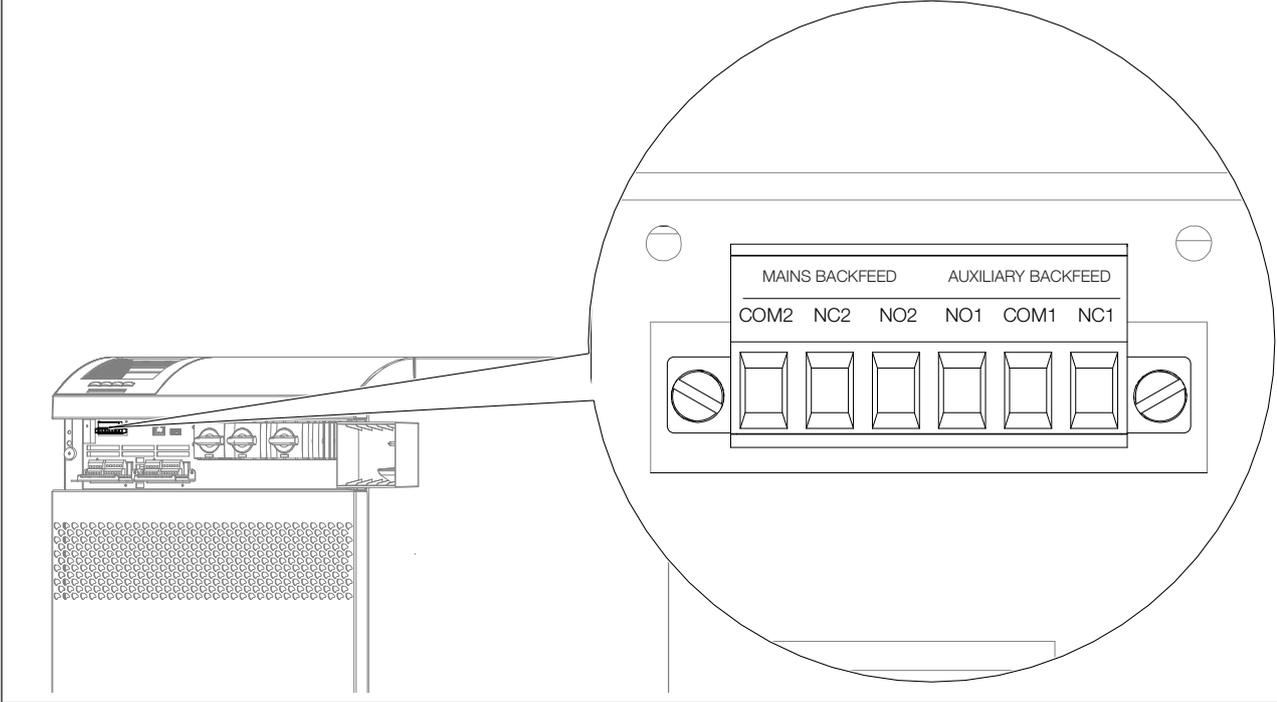


	<p>NOTE: Use a 220-240 V trip coil with integrated travel limit contact to pilot the input/auxiliary protection systems. If a trip coil without an integrated end of travel contact is used, a normally open contact must be added. Electrical contact data: 1.6 A 250 V AC.</p>
---	---

As an option the unit can be delivered with the integrated internal backfeed switches. Refer to 'Standard features and option' chapter.

- Separated input mains

Activating UPS protection on the mimic panel: access the MAIN MENU > SERVICE > UPS SETTINGS > MAINS CONFIGURATION > MAINS / AUXILIARY and set the parameter to **SEPARATED**.


3/3 models

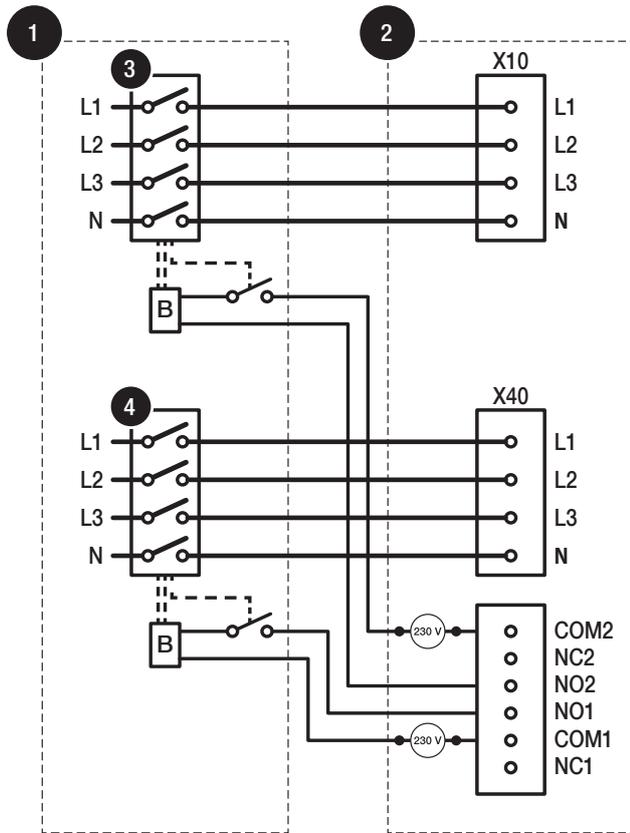

KEY

1	Distribution panel
2	UPS
B	Trip coil
X10	Mains terminal
X40	Auxiliary Mains terminal
3	Mains switch
4	Auxiliary Mains switch
COM2 - NO2	Mains BKF connector
COM1 - NO1	Auxiliary Mains BKF connector
	UPS output voltage

3/1 models

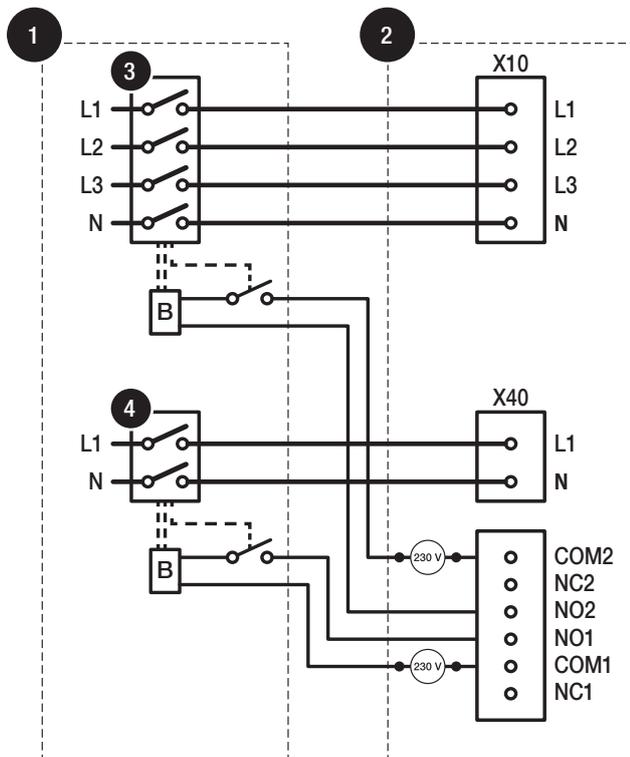


KEY

1	Distribution panel
2	UPS
B	Trip coil
X10	Mains terminal
X40	Auxiliary Mains terminal
3	Mains switch
4	Auxiliary Mains switch
COM2 - NO2	Mains BKF connector
COM1 - NO1	Auxiliary Mains BKF connector
	UPS output voltage

- Common input mains

Activating UPS protection on the mimic panel: access the MAIN MENU > SERVICE > UPS SETTINGS > MAINS CONFIGURATION > MAINS / AUXILIARY and set the parameter to **COMMON MAINS**.

3/3 models


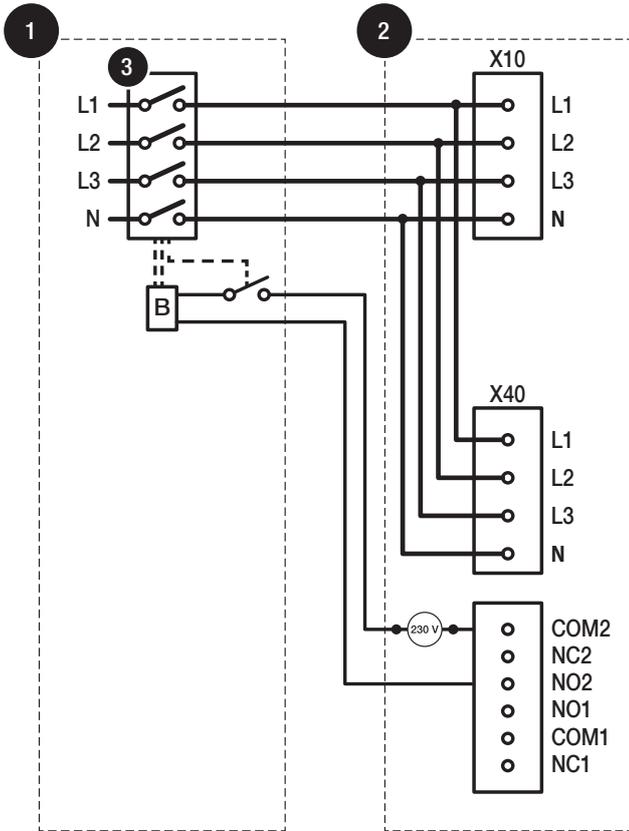


KEY

1	Distribution panel
2	UPS
B	Trip coil
X10	Mains terminal
X40	Auxiliary Mains terminal
3	Mains switch
COM2 - NO2	Common mains BKF connector
230 V	UPS output voltage

4.4 Cable positioning

	WARNING! The cables must be installed on trays according to the following diagrams. The trays must be positioned near the UPS.
	WARNING! All metal and suspended ducts or those in raised flooring MUST be connected to earth and to the various cabinets
	WARNING! Power cables and control cables MUST NEVER be installed in the same duct.
	WARNING! Risk of electromagnetic interference between battery cables and output cables.

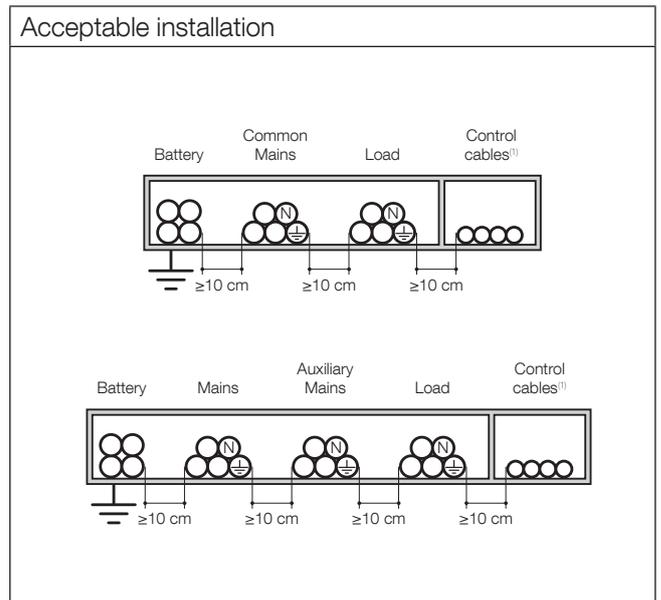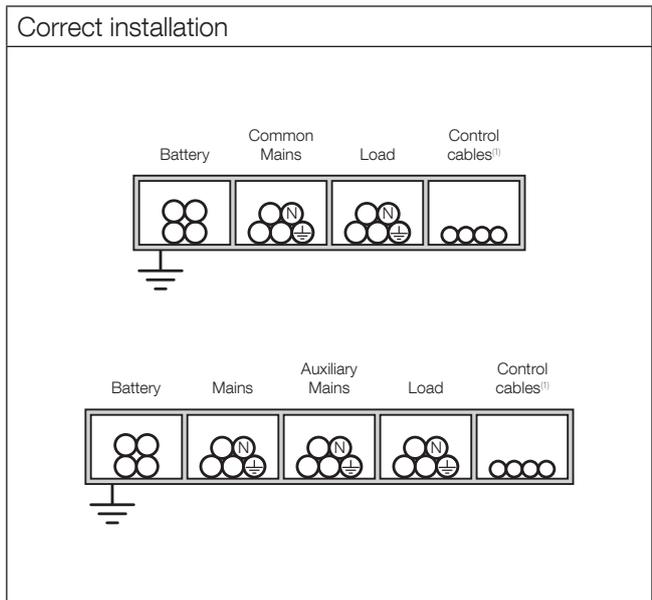


1. Control cables: connections between the cabinets and each unit, alarm signals, remote mimic panel, connection to the BMS (Building Management System), emergency stop, connection to generator.

5. OVERVIEW

5.1 Recommended configurations


5.1.1 10-40 kVA with external battery cabinet

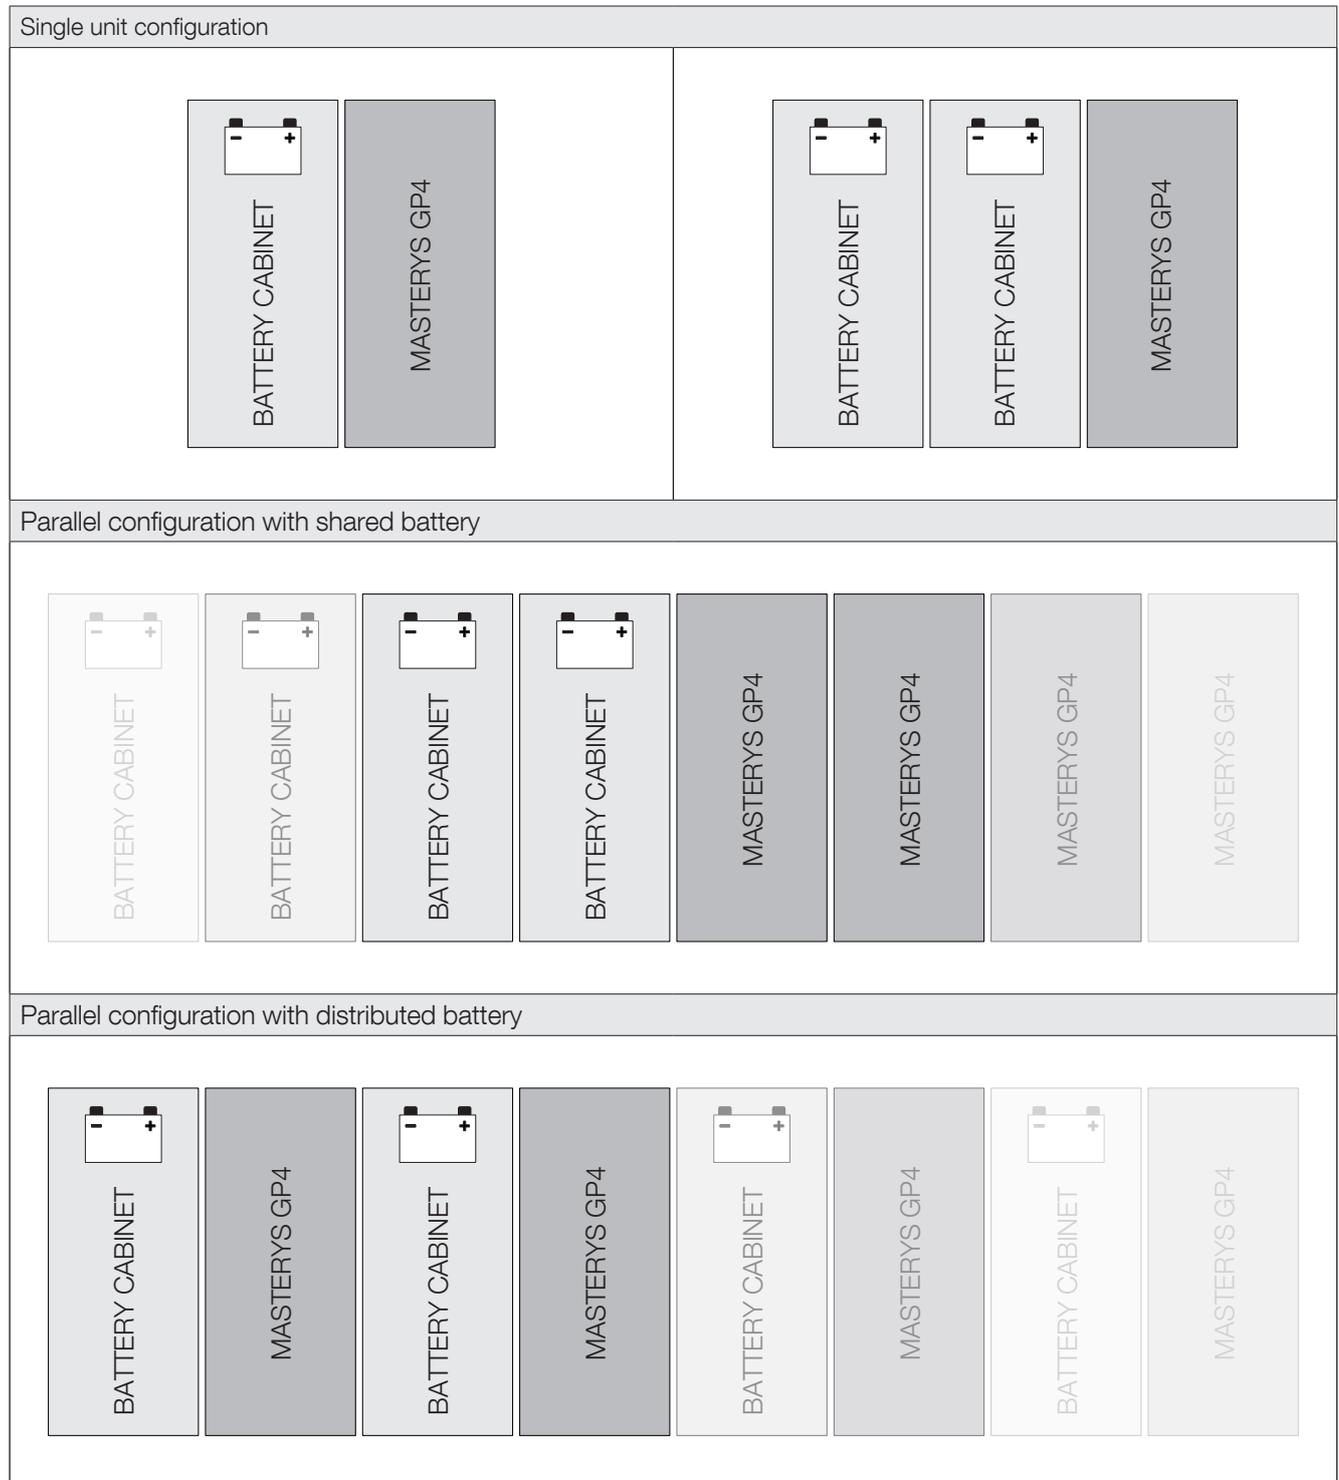

5.2 Front view

KEY

- 1 Control panel
- 2 UPS door
- 3 Luminous status bar

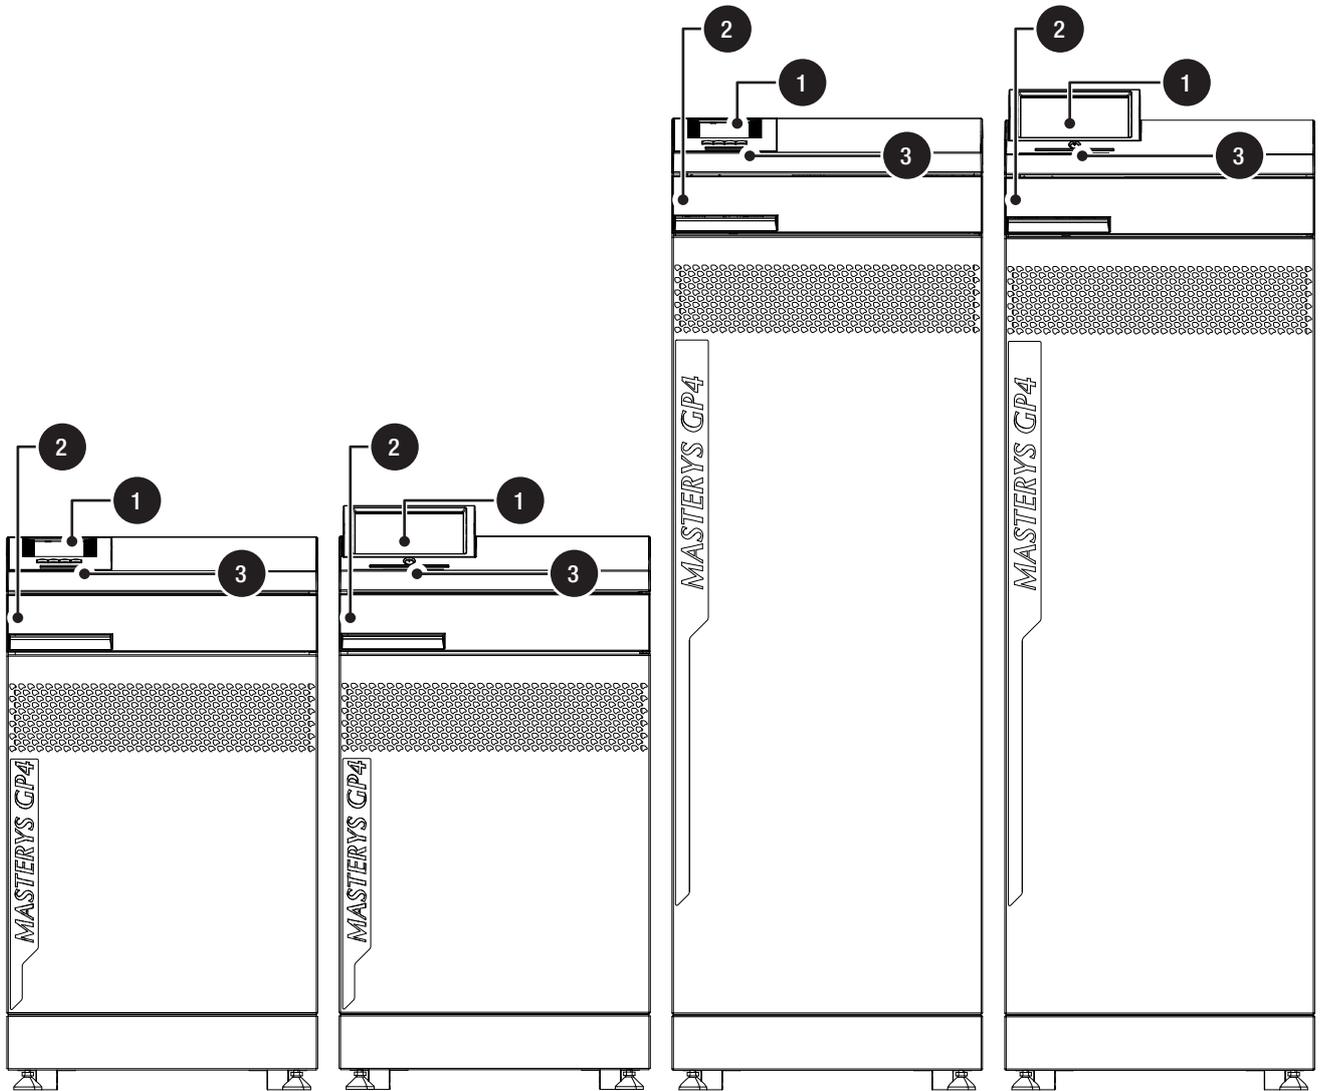

Model "S"
3.5" control panel

Model "S"
7" touchscreen control panel

Model "M"
3.5" control panel

Model "M"
7" touchscreen control panel

5.3 UPS switches

KEY

- Q1** Input switch (MAINS)
- Q2** Battery switch
- Q3** Output switch
- Q5** Maintenance bypass switch

UPS kVA	In/Out phase	Battery type	Details
10-15-20	3/1	External battery	
		Internal battery	
	3/3	External battery	
		Internal battery	
30-40	3/3	External battery	
		Internal battery	

5.4 Wiring diagram

KEY

X10 Input mains

X40 Auxiliary mains

X20 Battery

X50 Output

 PE

Q1 Input switch (MAINS)


Q4 Auxiliary mains Input switch (AUXILIARY MAINS)

Q5 Maintenance bypass switch

Q2 Battery switch

Q3 Output switch


A Protection

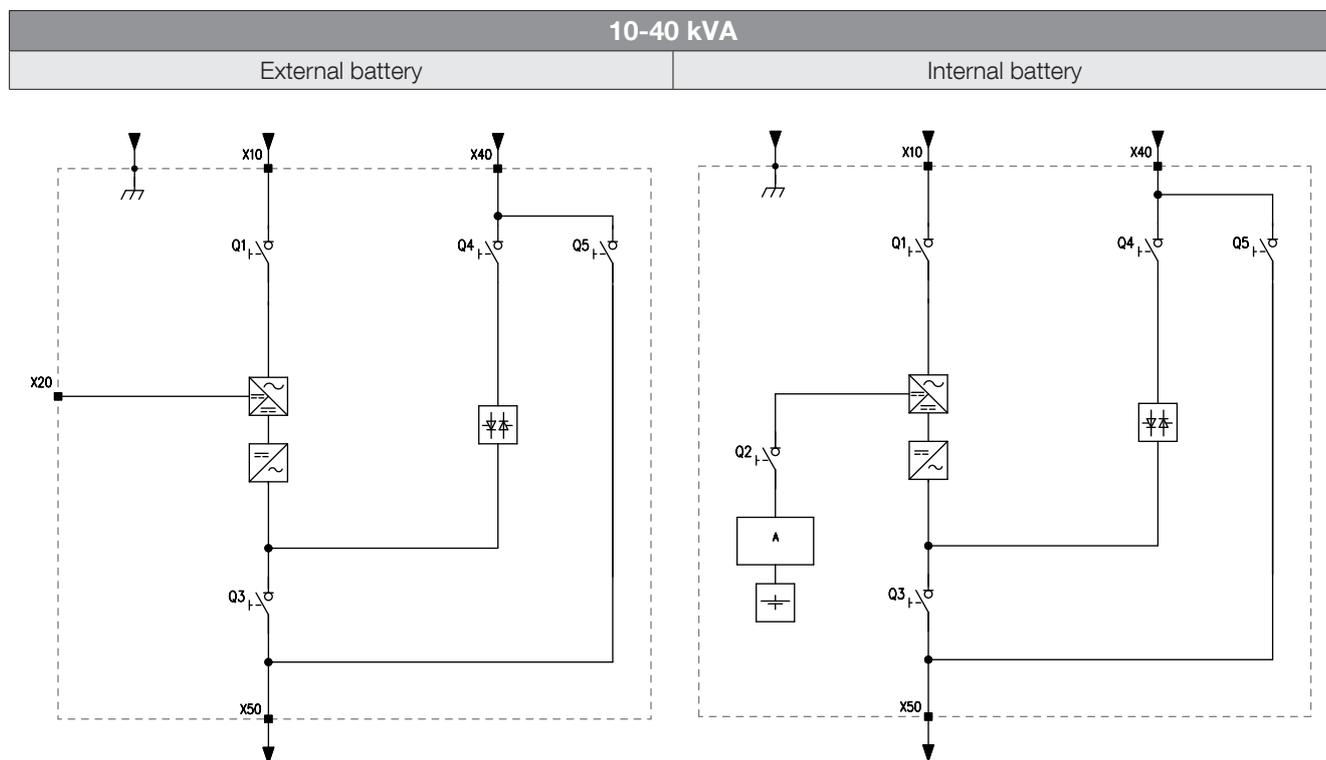

5.5 Internal front view details




KEY

- A1** Option slots 1
- A2** Option slots 2
- B** Ethernet network for service only
- C** USB connector for service only
- D** Backfeed connector

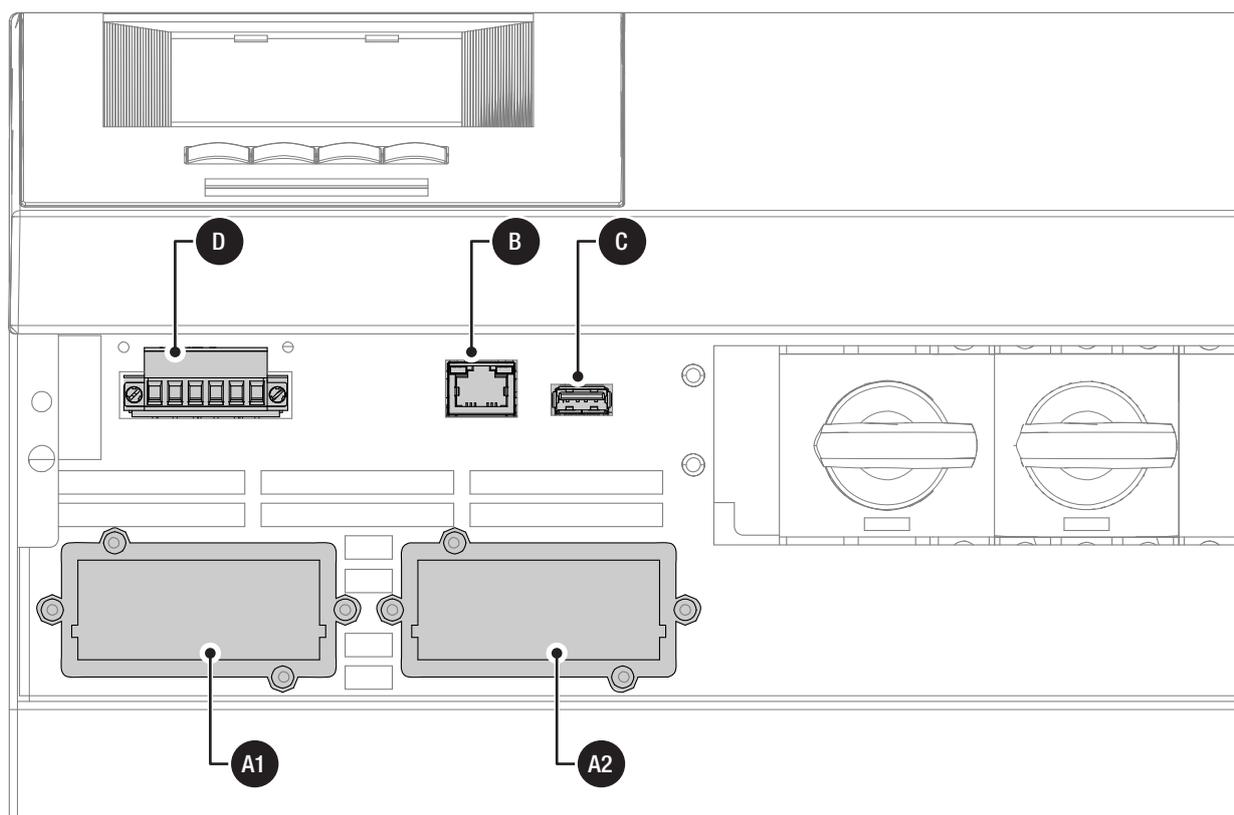


6. CONNECTIONS

	NOTE! Before carrying out any operations on the unit read the 'Safety standards' chapter carefully.
	WARNING! Battery power terminals are supplied by external battery cabinet. Before working on this circuit ensure that: - all the external battery cabinet switches are in OFF position; - the UPS is in maintenance bypass mode (refer to 'Operating modes' chapter) Check for presence of voltage before operating.
	Use cables with tin-plated eyelets for the PE connection.

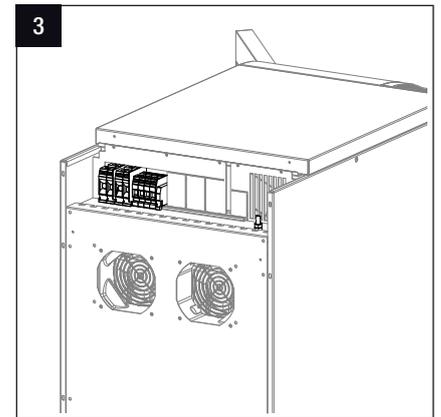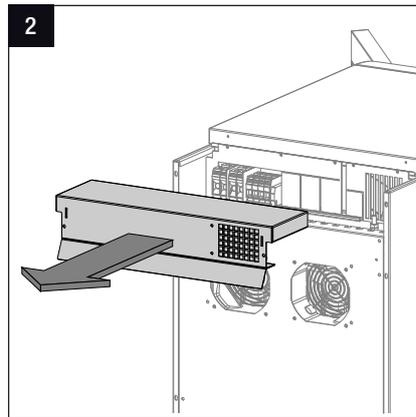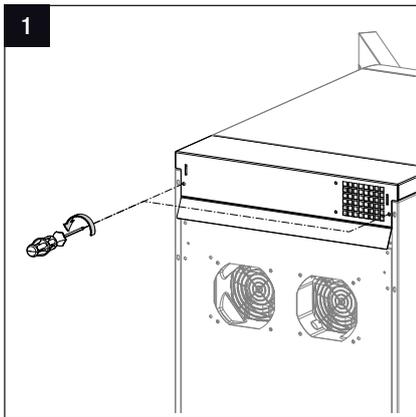

6.1 Earth connection

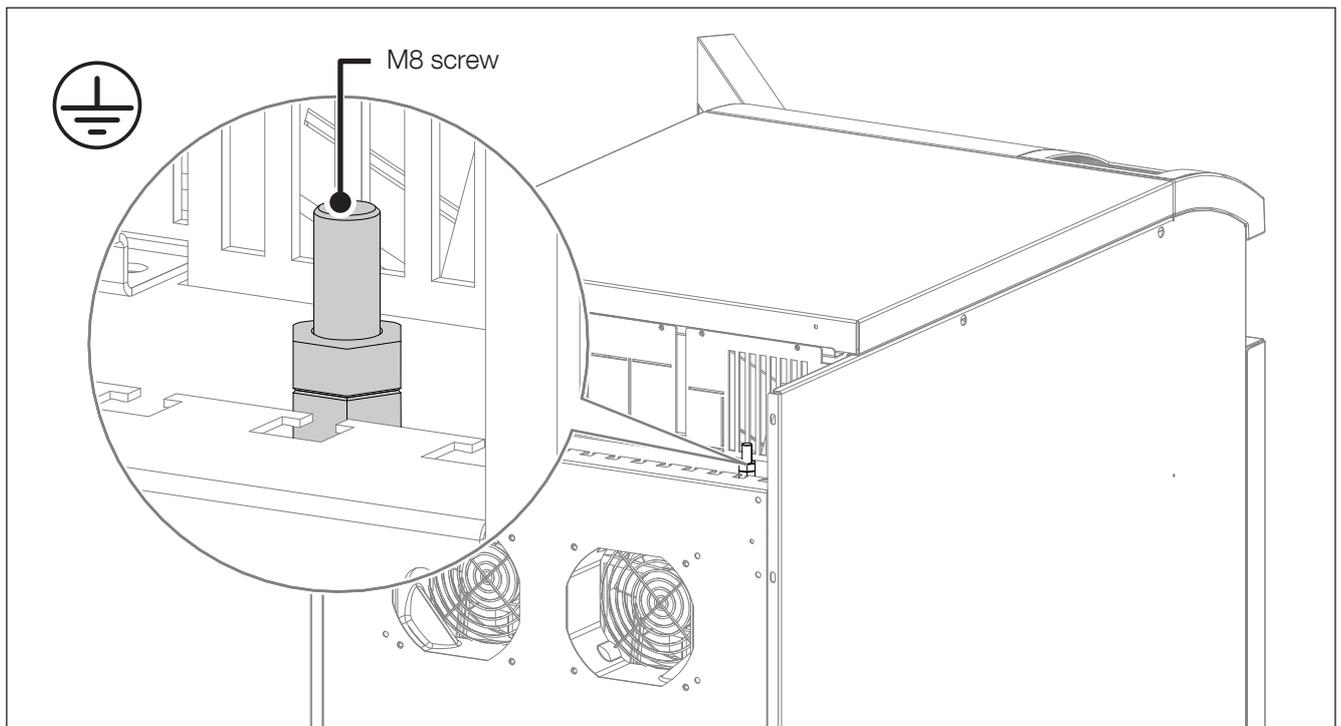

6.2 UPS and External battery connection



NOTE!
For further information refer to the battery cabinet manual.

- Remove terminal board protection.
- Connect the protective earth (PE) cable.
- Connect the cables between the UPS terminals and the battery cabinet terminals.



WARNING!
Strictly observe:
- the polarity of each individual string (refer to the figure below);
- the cable cross section (refer to 'Electrical requirements' chapter).



WARNING!
Cabling errors with inversion between phase and neutral conductors may cause permanent damage to the equipment.



WARNING!
Cabling errors with inversion of battery polarity may cause permanent damage to the equipment.



Reassemble terminal board protection.



If the UPS has internal batteries, connecting external battery cabinets is prohibited.

UPS kVA	In/Out phase	Battery type	Details ¹
10-15-20	3/1	External battery	
		Internal battery	
	3/3	External battery	
		Internal battery	


UPS kVA	In/Out phase	Battery type	Details ¹
30-40	3/3	External battery	
		Internal battery	

1. For further details refer to 'Electrical requirements' chapter.




WARNING: pay attention to the individual cable range for battery connections.


Connection example - single unit

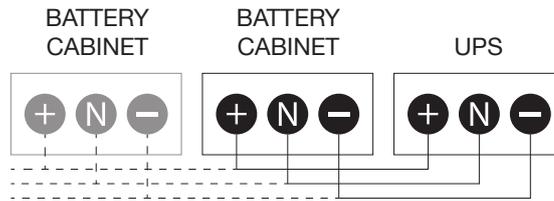

Connection example - parallel configuration with shared battery

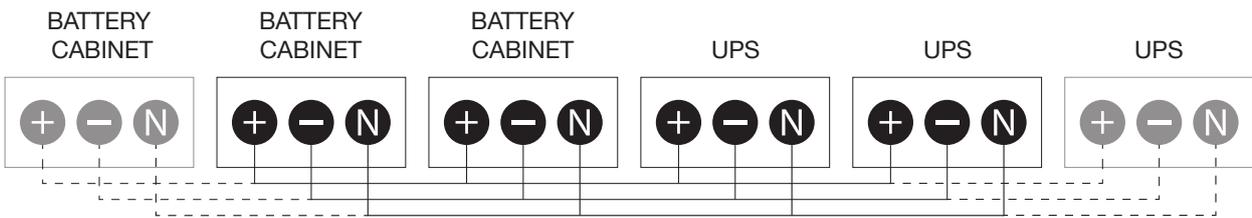

Connection example - parallel configuration with distributed battery

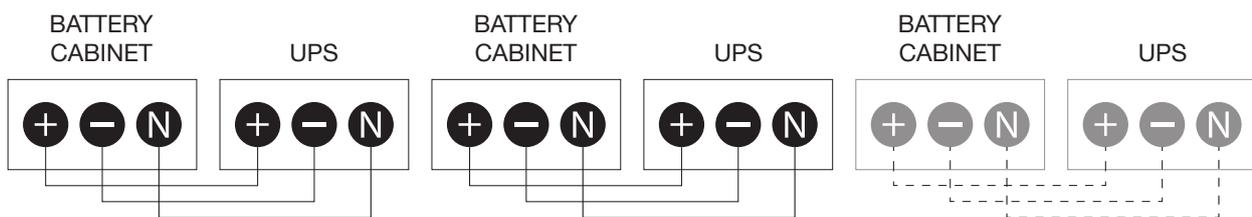

Note!

When battery cabinets not supplied by Socomec are used, the installer is responsible for:

- checking electrical compatibility;
- checking the presence of appropriate protective devices (fuses and circuit breakers that ensure the cables are protected from the UPS to the battery cabinet).





Once the UPS is switched on – before closing the battery switches – check the battery parameters on the control panel menu. For further information, refer to 'Menu' chapter.



Note!



Not all battery/capacity combinations are available.

6.3 Completion of the installation

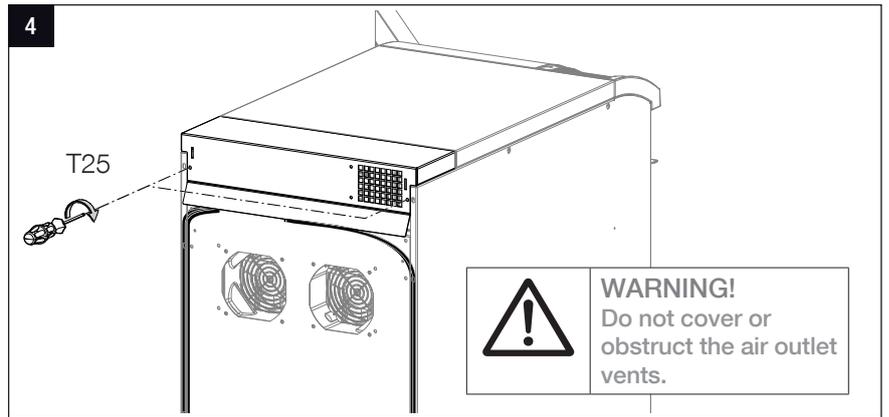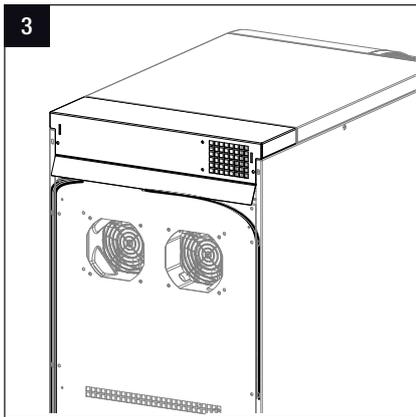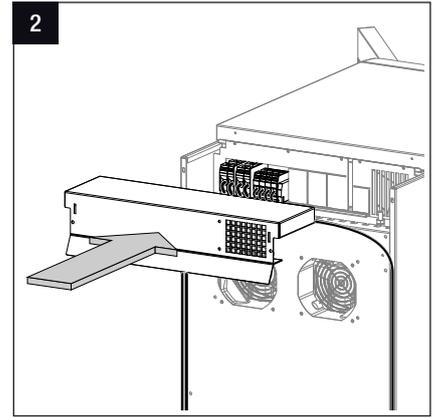
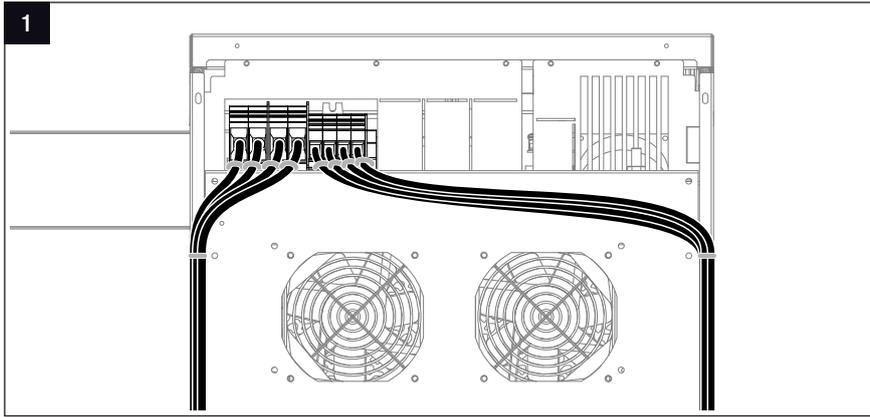





3.5" control panel

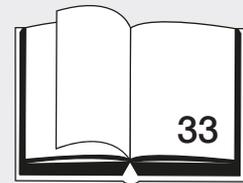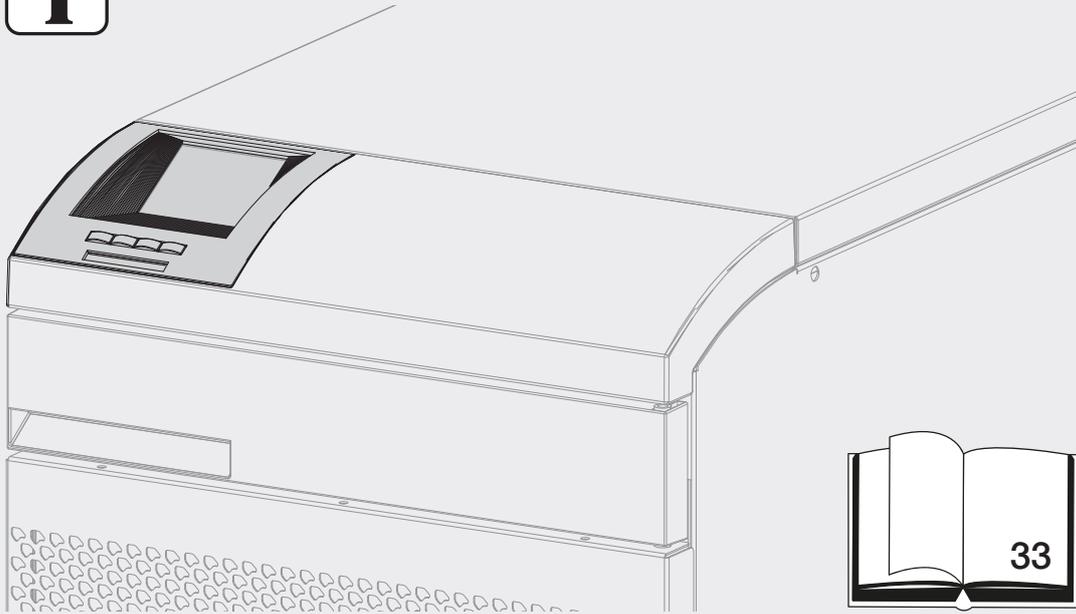

7" touchscreen control panel

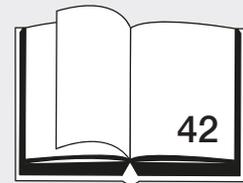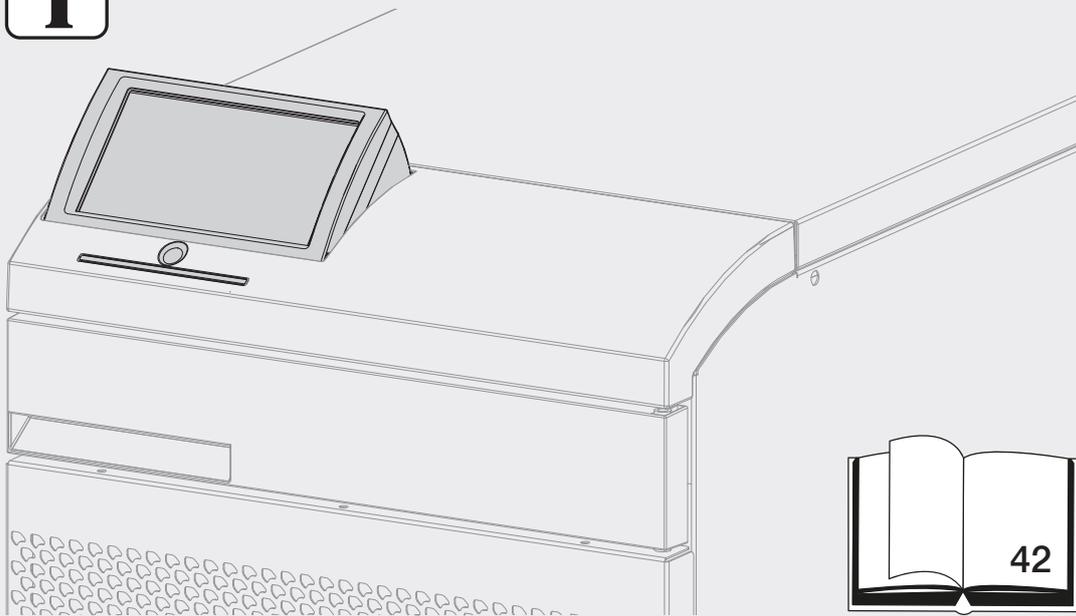

7. 3.5" CONTROL PANEL

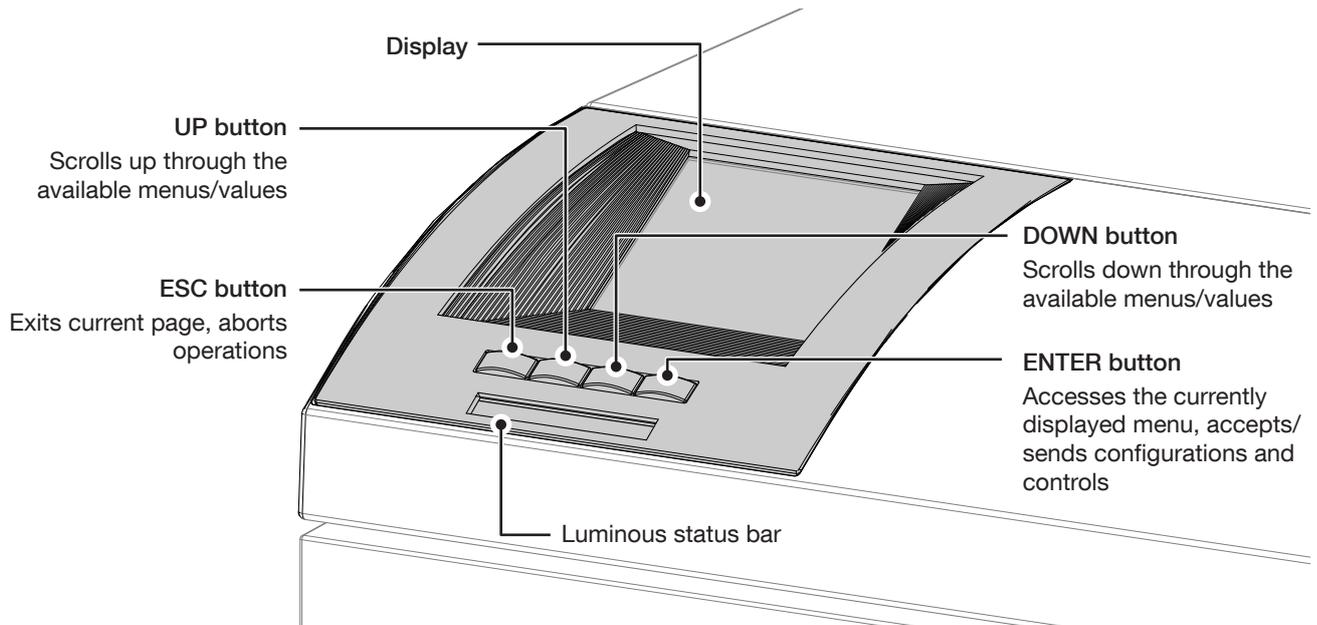

Control panel with LED status bar indicator	
Colour	Description
Flashing red-yellow-green-red	No communication. The data is no longer updated or not present. Load status cannot be given.
Flashing red	Load supplied, but the output will stop in a few minutes.
Red	Load not supplied: Output switched OFF due to an alarm.
Flashing yellow-red	Load supplied, but no longer protected. A critical alarm occurs.
Flashing yellow	Maintenance request / in progress.
Yellow	Load supplied with warning.
Flashing green-yellow-green	Load supplied and preventive alarm present.
Flashing green	Load going to be supplied and tested.
Green	Load protected in inverter.
Grey (OFF)	Load not supplied output on standby / isolated / OFF.

KEYPAD LOCK

The keypad can be locked by pressing the buttons in the following sequence:

ESC > UP > DOWN > ENTER

To unlock the keypad the buttons must be pressed in the reverse sequence:

ENTER > DOWN > UP > ESC


These sequences work only on the MIMIC PANEL page.

When the keypad is locked the key symbol is shown.

8. MENU

8.1 Display overview (SYSTEM)


Mimic panel

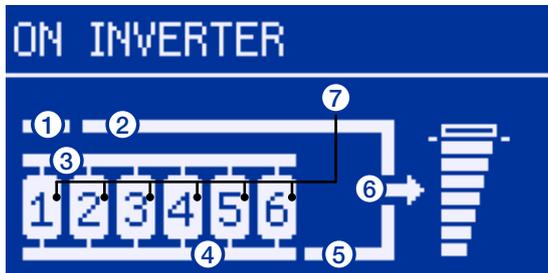

SEGMENT	DESCRIPTION
1	BYPASS INPUT
2	BYPASS OUTPUT
3	INPUT MAINS
4	UNIT OUTPUT
5	INVERTER OUTPUT
6	SYSTEM OUTPUT
7	N° UNIT

8.2 Display overview (UNIT)


Status bar (always displayed)

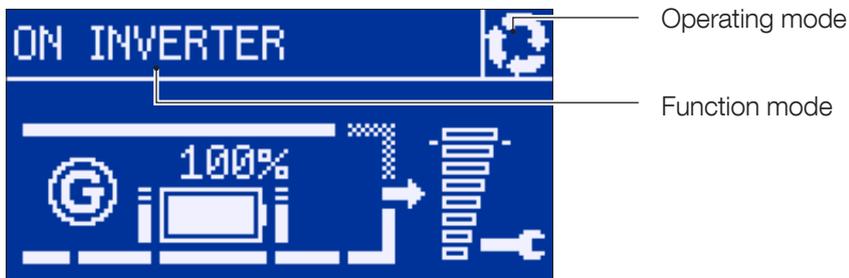

Unit status	Description
UPS STARTING	The start procedure is in progress
UPS STOPPING	The stop procedure is in progress
ON MAINT. BYPASS	The manual bypass is active
IMMINENT STOP	The output supplying switch-off is imminent
ON BATTERY	The output load is on battery
BATTERY TEST	Battery test in progress
ON INVERTER	The output load is on inverter (normal mode)
ON AUTO BYPASS	The output load is on static bypass
UNIT AVAILABLE	Energy saver is active (inverter is off temporarily)
STANDBY	Unit on standby
LOAD OFF	The output load is off

Function mode	Description
	The UPS is in maintenance mode
	Output breaker / output relays open
	Eco mode schedule enabled
	An eco mode command has been carried out
	A remote stand-by command has been carried out
	The energy-saver mode has been enabled
<NOTHING DISPLAYED>	Normal mode

Mimic panel

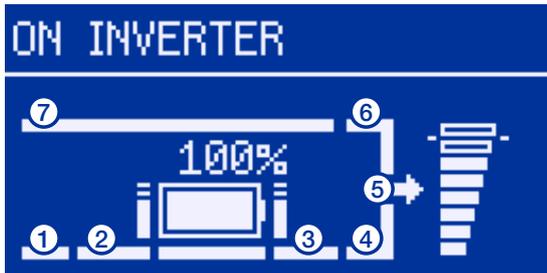


SEGMENT	DESCRIPTION
1	INPUT MAINS
2	RECTIFIER ON
3	INVERTER INPUT OR BATTERY OUTPUT
4	INVERTER OUTPUT
5	UNIT OUTPUT
6	OUTPUT FROM STATIC SWITCH
7	BYPASS INPUT

	<p>NOTE! When in converter mode, 6 and 7 are not shown.</p>
---	--


Bar styles identify the energy flow:

- solid: enabled
- dotted: disabled


Additional icons

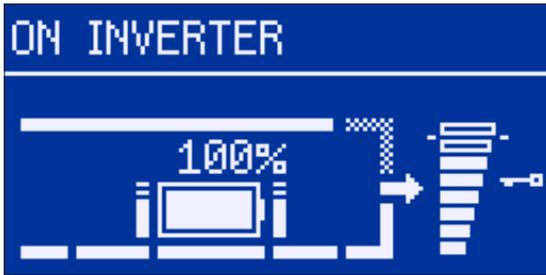

key icon: displayed if the keypad is locked

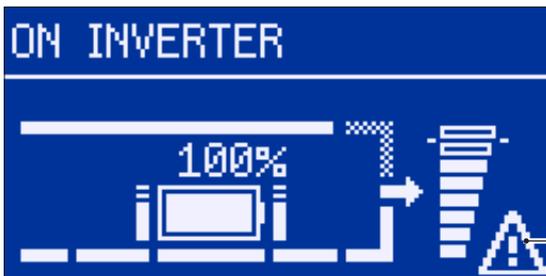


General alarm

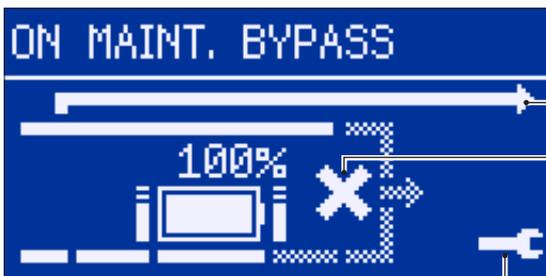

On maintenance bypass

Bypass mode (or Eco Mode) not possible



Scheduled Inspection warning: machine inspection required, call SOCOMEC support service

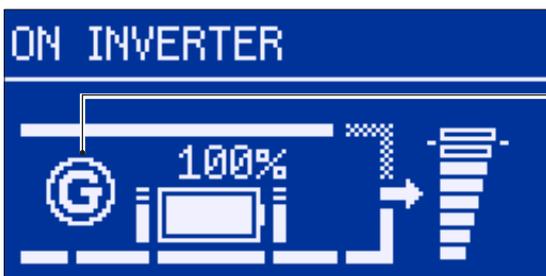


Operating on GenSet

NOTE! Available only with ADC+SL option card

Load level

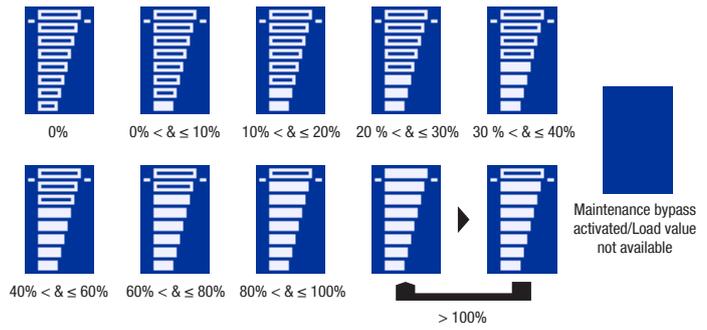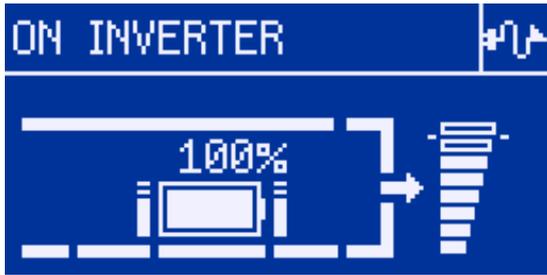

Battery status

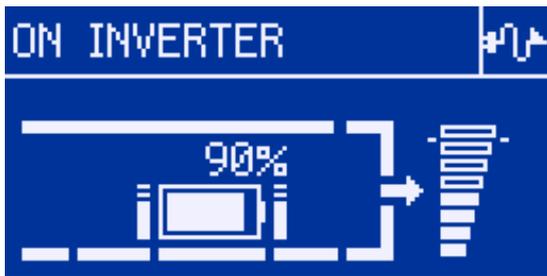

NOTE: Battery symbol is shown only if battery available

Battery charging

Upper level flashing



Battery discharging


Level reached is flashing



Battery open



Battery alarm flagged

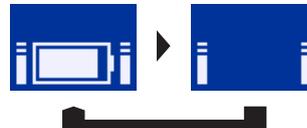

8.3 Menu tree

	MENU ITEMS ⁽¹⁾		
	Stand alone UPS	Unit	System
▶ ALARMS	•	•	•
▶ STATUS	•	•	•
▶ EVENT LOG	•	•	•
▼ MEASUREMENTS			
▶ OUTPUT MEASURES	•	•	•
▶ BATT MEASURES	^	^	^
▶ INPUT MEASURES	•	•	•
▶ BYPASS MEASURES	•	•	•
▼ CONTROLS			
▼ PROCEDURES			
▶ START PROCEDURE	•		•
▶ MAINT. BYPASS PROC.	•		•
▶ STOP PROCEDURE	•	•	
▼ BATTERY			
▶ BATT. TEST RESULT	^	^	^
▶ BATTERY TEST	^	^	^
▶ BATT TEST SCHEDULE	^	^	^
▼ ECO MODE			
▶ ECO MODE ON	•		•
▶ ECO MODE OFF	•		•
▶ ECO MODE SCHEDULE	•		•
▼ ENERGY SAVER			
▶ ENERGY SAVER ON			•
▶ ENERGY SAVER OFF			•
▼ MAINTENANCE			
▶ ALARMS RESET	•	•	•
▶ POSTPONE MAINT. ALARM	•	•	•
▶ LED TEST	•	•	•
▼ UPS CONFIG			
▶ CLOCK	•		•
▶ REMOTE CTRL	•		•
▼ COM SLOTS			
▶ TEMPERATURE PROBE	^	^	^
▶ RS485 PORT SLOT1	•	•	•
▶ RS485 PORT SLOT2	•	•	•
▼ REFERENCES			
▶ UPS INFORMATION	•	•	•
▶ SERIAL NUMBER	•	•	•
▶ SOCOMEK REFERENCE	•	•	•
▶ USER DEVICE REF	•	•	
▶ USER DEV LOCATION	•	•	

	MENU ITEMS ⁽¹⁾		
	Stand alone UPS	Unit	System
▼ USER PARAM			
▶ LANGUAGE	•		•
▶ PASSWORD	•		•
▶ BUZZER	•		•
▼ ADC+SL CONFIG	•	•	
▶ CARD 1	•	•	
▶ CARD 2	•	•	
▼ SERVICE			
▶ COMMISSIONING CODE	^	^	^
▶ SERVICE REPORT	•	•	
▶ FIRMWARE VERSION	•	•	
▼ NETWORK PARAMETERS			
▶ DHCP	•	•	
▶ IP ADDRESS	•	•	
▶ SUBNET MASK	•	•	
▶ GATEWAY	•	•	
▶ MAC ADDRESS	•	•	
▼ UPS SETTINGS			
▼ OUTPUT			
▶ OUTPUT VOLTAGE	•		•
▶ OUTPUT FREQUENCY	•		•
▶ CONVERTER MODE	•		•
▶ AUTO RESTART	•		•
▼ BATTERY			
▶ BATTERY AVAILABLE	^	^	^
▶ BATTERY CONNECTION	^	^	^
▶ BATTERY TYPE	^	^	^
▶ RECHARGE TYPE	^	^	^
▶ ...	^	^	^
▶ MAINS CONFIGURATION	•		•
▼ PARALLEL SYSTEM			
▶ UNITS IN PARALLEL			•
▶ REDUNDANCY LEVEL			•

(^). depending on setting.

1. Some menu options may not be available on some UPS models.

8.4 Menu function descriptions

8.4.1 Entering passwords

Some operations and settings require a password in order to be performed.



The default password is **SOCO**.

Press **UP** and **DOWN** to scroll the letters. Press **ENT** to confirm the selection or **ESC** to abort.

8.4.2 ALARMS menu

This menu displays all pending UPS alarms.

To reset alarms enter the menu **MAIN MENU > CONTROLS > MAINTENANCE > ALARMS RESET**.

If there is more than one page press **UP/DOWN** to scroll pages.

8.4.3 STATUS menu

This menu displays all UPS ON statuses.

If there is more than one page press **UP/DOWN** to scroll pages.

8.4.4 EVENT LOG menu

This menu accesses the event log (Status and Alarms).

8.4.5 MEASUREMENTS menu

This menu displays all UPS measurements relating to the input stage, output stage, batteries and auxiliary mains (bypass).

If there is more than one page press **UP/DOWN** to scroll pages.

8.4.6 CONTROLS menu

This menu contains the controls that can be sent to the UPS. Some of them are password protected. If a command is not available, a COMMAND FAILURE message appears.

- PROCEDURES: START PROCEDURE/MAINT. BYPASS PROC./STOP PROCEDURE see 'Operating procedures' chapter.
- BATTERY: BATTERY TEST: this function checks whether or not test conditions are available then returns the results.
- ECO MODE: ON/OFF: this function sets/resets the ECO MODE.
- MAINTENANCE: ALARMS RESET: this function clears the alarm history, LED TEST: this function activates the LED by flashing for few seconds.

8.4.7 USER PARAM menu

This menu contains all the machine settings such as language, date and buzzer.

To reset the language back to English, press the **ESC** button for 5 seconds.

System critical parameters are password protected and should be changed by specialist personnel only.

8.4.8 SERVICE menu

This menu is reserved for support service personnel and holds UPS identification data and utilities for software upgrades.


The Commissioning Code is provided directly by the reference Support Centre upon communication of the serial number. When contact is made with the Support Centre for the Commissioning Code, detailed information can be obtained on the UPS functions available and on regular preventive maintenance programmes.

- UPS SETTINGS: critical machine settings for output, batteries and backfeed.
Some parameters cannot be modified when the UPS supplies the load by INVERTER or BYPASS.



Wrongly configured UPS SETTINGS could damage the load or batteries.

9. 7" TOUCHSCREEN CONTROL PANEL

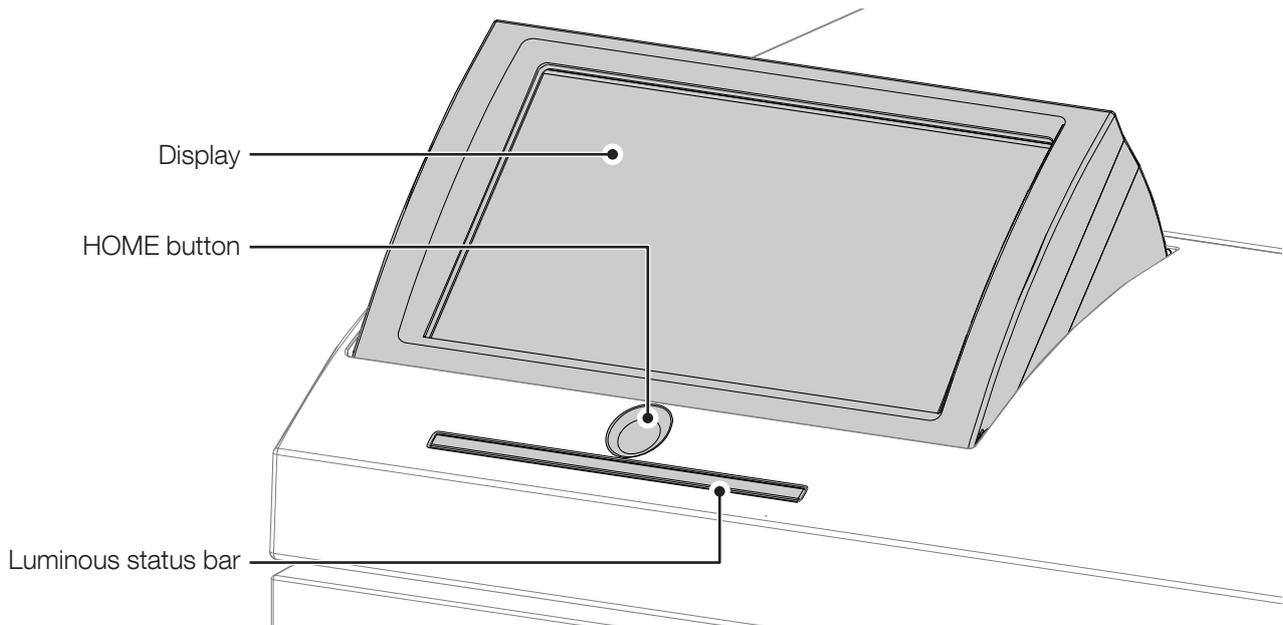

Control panel with LED status bar indicator	
Colour	Description
Flashing red-yellow-green-red	No communication. The data is no longer updated or not present. Load status cannot be given.
Flashing red	Load supplied, but the output will stop in few minutes.
Red	Load not supplied: Output switched OFF due to an alarm.
Flashing yellow-red	Load supplied, but no longer protected. A critical alarm occurs.
Flashing yellow	Maintenance requested / or service mode in progress.
Yellow	Load supplied with warning.
Flashing green-yellow-green	Load supplied and preventive alarm present.
Flashing green	Load going to be supplied, battery test in progress or UPS auto-test running.
Green	Load protected by inverter or UPS in eco mode.
Grey (OFF)	Load not supplied: output on standby / isolated / OFF.

Only two elements are necessary to interact with the unit:

- HOME button: is a mono-stable button used to interact manually with the display especially in emergency situations. Logic behind the interaction is:
 - Single pressing (below 3 sec): HOME page return of graphic display
 - 3 sec < time < 6 sec: change the language to the default (English)
 - 6 sec < time < 8/9 sec: go to the calibration screen automatically
 - Above 8/9 sec: implement the hw reset of the micro controller and restart of the graphic
- Display: is the main active matrix of the display sensitive to touch pressure. The display is designed for rugged industrial applications. The display is single-touch only (no double touch effects). Depending on pressure, the navigation tree and various functions will be executed.

Two special functions are present on the control panel:

- Standby screen: for safety reasons, after a programmable amount of time, the display goes on standby. Display goes to the main screen and touch screen sensitivity is disabled. A label on the bottom of the main screen displays this status. To exit this status press the screen for the HOME button.
- OFF status: for power consumption and life enhancement, after a programmable amount of time display goes in "off". Display goes black and no interaction is possible. Touching the HOME button or screen resumes normal operations.




Handle the control panel with care. It is made of metal, glass and plastic and contains delicate electronic components. The control panel may be damaged if dropped, pierced or broken or comes into contact with liquids.
Do not use the control panel with a cracked screen, as it may cause injury.


10. DISPLAY OPERATION

10.1 Display description


- Stand alone UPS or unit view

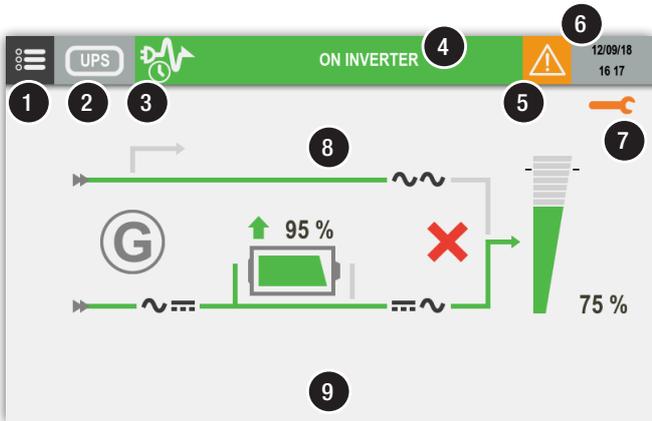

- UPS parallel system: System view

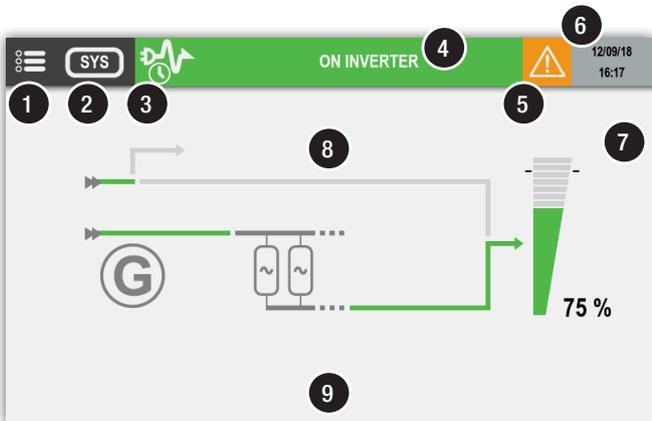

- UPS parallel system: Units overview

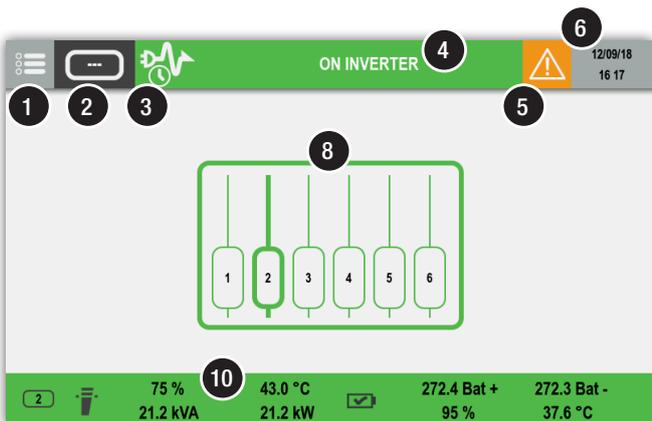

- 1 Menu access
- 2 Device reference
- 3 Functioning mode (see 'Functioning mode' chapter)
- 4 Status displaying / Status page access
- 5 Alarm present – access to alarm page
“Alarms” icon appears in case of preventive/critical alarm. A dedicated pop-up appears and can be cleared.
- 6 Clock
- 7 Maintenance alert
- 8 Synoptic area
- 9 Help message area
“Press Key to wake up” appears when the display goes on standby. Touch the display to wake it up.
- 10 Measures report

10.2 Menu architecture

	MENU ITEMS		
	Stand alone UPS [UPS]	Unit [1] to [6]	UPS System [SYS]
▼ MONITORING			
▶ ALARMS	•	•	•
▶ STATUS	•	•	•
▶ SYNOPTIC	•		
▶ UNIT		•	•
▶ SYSTEM		•	•
▶ UNITS OVERVIEW		•	•
▼ EVENTS LOG	•	•	•
▼ MEASUREMENTS			
▶ OUTPUT MEASUREMENTS	•	•	•
▶ BATTERY MEASUREMENTS	^	^	^
▶ INPUT MEASUREMENTS	•	•	•
▶ INVERTER MEASUREMENTS	•	•	
▶ BYPASS MEASUREMENTS	^	^	^
▼ CONTROLS			
▼ UPS PROCEDURES			
▶ START	• ¹		• ¹
▶ STOP	• ¹	• ¹	
▶ ON MAINTENANCE BYPASS	• ¹		• ¹
▼ MODE			
▼ ECO MODE CONTROLS			
▶ Eco Mode ON	^		^
▶ Eco Mode OFF	^		^
▶ ECO MODE SCHEDULE	^		^
▼ ENERGY SAVER CONTROLS			
▶ Energy Saver ON			^
▶ Energy Saver OFF			^
▼ BATTERY			
▼ BATTERY CONTROLS			
▶ BATTERY TEST	^	^	^
▶ BATTERY SCHEDULE	^	^	^
▼ MAINTENANCE			
▶ Alarms reset	•	•	•
▶ Postpone maintenance alarm	•	•	•
▶ LED test	•	•	•
▶ User report	•	•	•

	MENU ITEMS		
	Stand alone UPS [UPS]	Unit [1] to [6]	UPS System [SYS]
▼ CONFIGURATIONS	•		•
▶ CLOCK	•		•
▼ COM-SLOTS			
▶ COM-Slot 1	^	^	
▶ COM-Slot 2	^	^	
▶ COM-Slot 3 ⁽²⁾	^	^	
▶ TEMPERATURE PROBE	^	^	^
▼ REFERENCES			
▶ SOCOMEC REFERENCE	•	•	•
▶ SERIAL NUMBER	•	•	•
▶ User Reference	•	•	
▶ Location	•	•	
▼ REMOTE			
▶ Remote ON	•		•
▶ Remote OFF	•		•
▼ USER PARAM			
▶ LANGUAGE	•		•
▶ PASSWORD	•		•
▶ BUZZER	•		•
▶ DISPLAY	•		•
▶ PREFERENCES	•		•
▶ ADC+SL CONFIG	•	•	
▶ TOUCHSCREEN	•	•	•

	MENU ITEMS		
	Stand alone UPS [UPS]	Unit [1] to [6]	UPS System [SYS]
▼ SERVICE			
▶ SERVICE REPORT	•	•	
▶ FW VERSION	•	•	
▼ UPS SETTINGS			
▼ OUTPUT MENU			
▶ Output voltage	•		•
▶ Output frequency	•		•
▶ Converter mode	•		•
▶ Automatic restart	•		•
▼ BATTERY MENU			
▼ BATTERY INSTALLATION			
▶ Battery available	^	^	^
▶ Battery connection	^	^	^
▶ Battery type	^	^	^
▼ BATTERY DATA			
▶ Capacity	^	^	^
▶ N° of cells	^	^	^
▶ N° of blocks	^	^	^
▶ Recharge type	^	^	^
▶ Premin. Voltage	^	^	^
▶ Min. Voltage	^	^	^
▶ Floating	^	^	^
▶ Boost Voltage	^	^	^
▼ BATTERY THRESHOLDS			
▶ Rech. Curr. Limit	^	^	^
▶ Float-Boost Threshold	^	^	^
▶ Boost-Float Threshold	^	^	^
▼ TEMP. COMPENSATION			
▶ Temper. Compensation	^	^	^
▼ MAINS CONFIGURATION			
▶ Mains configuration	•		•
▼ PARALLEL SYSTEM			
▶ Units in parallel			•
▶ Redundancy level			•
▼ NETWORK PARAMETERS (Only for service)			
▶ DHCP	•	•	
▶ IP	•	•	
▶ MASK	•	•	
▶ GATEWAY	•	•	
▶ MAC	•	•	

(^). Depending on setting

1. Displayed depending on state.

2. Only available for 160 kVA.

10.3 Functioning mode



Service



Isolated



Eco mode scheduling active



Fast Eco Mode



Eco Mode active



Standby active




Energy saver active



Autotest

10.4 STATUS

10.4.1 Status page

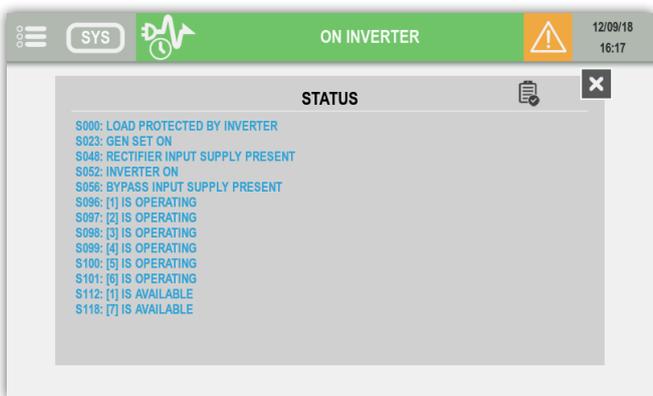

Filtering



List all active status



List all status



List all status not active


10.5 Alarms management

10.5.1 Alarm report

The alarm icon is present if at least one alarm is present.
Tap on the icon to open the alarm list.

10.5.2 Alarm popup

In case of critical alarm a popup message appears and the buzzer is running according its settings.
The highest priority alarm is displayed.

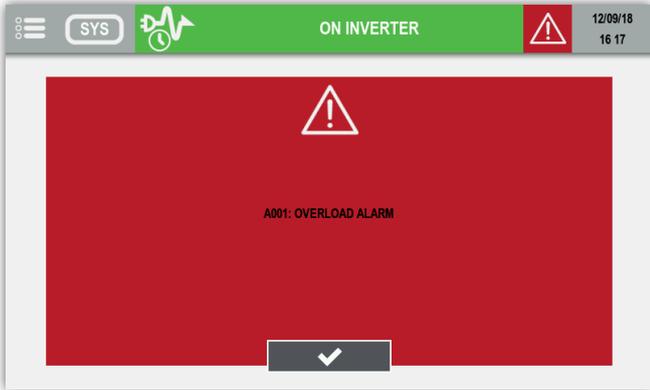

Tap on valid button to stop the buzzer and to close the popup message. The alarm page is automatically display after this action.

10.5.3 Alarm page



Filtering



List all active alarms



List all active preventive alarms




List all active critical alarms

Popup alarm for preventive alarm


In USER PARAM menu, USER PREFERENCES item gives the possibility to enable popup alarm also with preventive alarms.

10.6 Synoptic animation

- Stand alone UPS or unit view

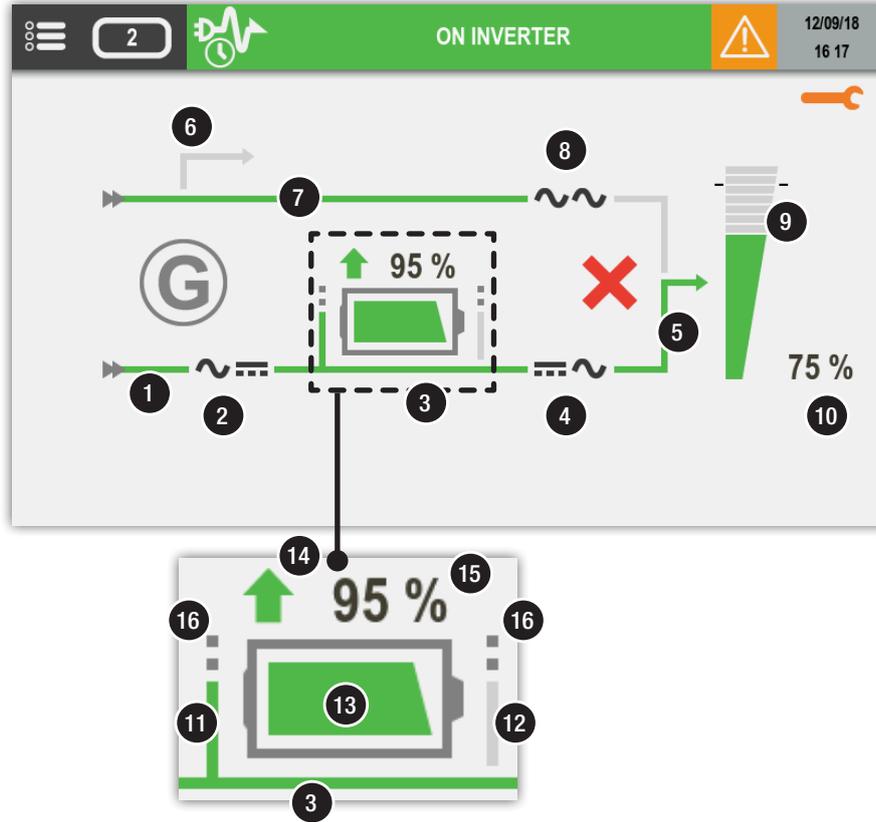

- UPS parallel system: System view

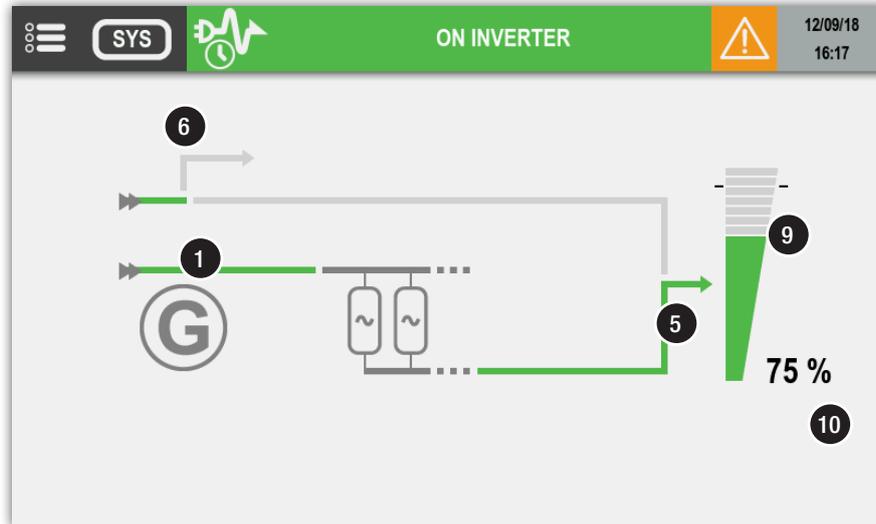


Item	Description	Rules of animation				Touch actions
		Grey	Green	Yellow	Red	
1	Rectifier input supply	Not present	Present	Out of tolerance	-	-
2	Rectifier status	Normal status 	-	Preventive alarm 	Critical alarm 	Access to input measurements page
3	DC voltage bus	DC voltage absent	DC voltage presence	-	-	-
4	Inverter status	Normal status 	-	Preventive alarm 	Critical alarm 	Access to inverter measurements page
5	Inverter output	Inverter OFF	Inverter ON	Inverter on battery	-	-
6	Maintenance bypass *	MBP present	-	Load on maintenance bypass	-	-
7	Bypass input *	Not present	Present	Out of tolerance	-	-
8	Bypass status *	Normal status 	-	Preventive alarm 	Critical alarm 	Access to bypass page
9	Load rate symbol	No load 	Fill-up to 95% 	Fill-up to 110% 	Fill-up over 110% 	Access to output measurements pages
10	Load rate value	Instantaneous value. displayed if value > 0				-
11	DC battery input **	DC voltage absent	DC voltage presence	BCR function running	-	-
12	DC battery output **	DC voltage absent	DC voltage presence	Inverter on battery	-	-
13	Battery indicator **	-	Fill-up to 100% 	Fill-up to 45% 	Fill-up to 15% 	Access to bat. measurements page
14	Battery charging / discharging **	-	Battery charging 	Battery discharging 	-	-
15	Battery level or remaining backup time during battery discharge **	Instantaneous value. displayed if value > 0 The backup time is no more displayed if it is below two minutes.				-
16	Shared battery symbol not present if each unit has its own battery. **					-






* Element disappears if converter mode is active

** Not present if batteries are not present

- UPS parallel system: Units overview

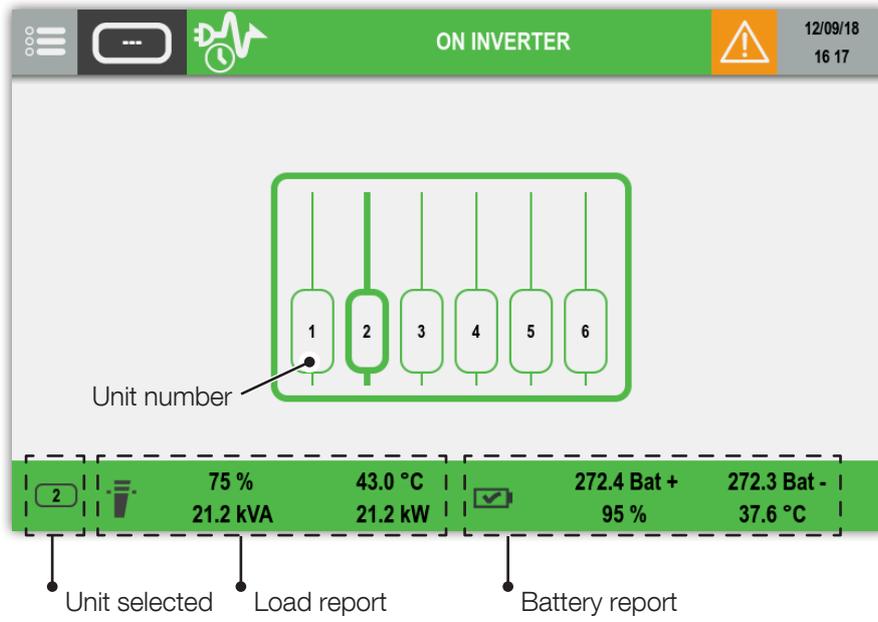

• Battery animation

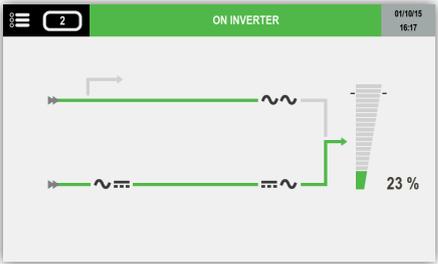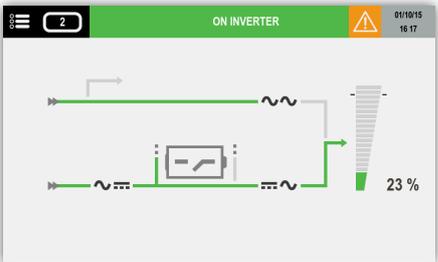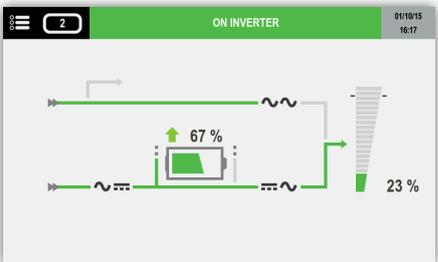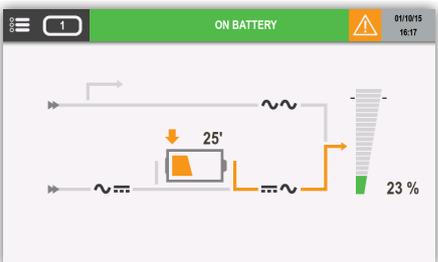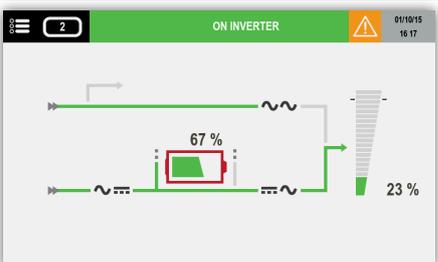Battery status	DESCRIPTION
	<p>If battery is absent, the battery icon is not displayed</p>
	<p>If battery is present but not connected, the icon is displayed</p>
	<p>If the battery is present and charging, the arrow icon is displayed</p>
	<p>If the battery is present and discharging, the arrow icon is displayed</p>
	<p>If a battery alarm has occurred, the red icon is displayed</p>

10.6.1 Additional icons



Bypass impossible



Bypass locked



“Genset Mode” when the gen set contact is active. Need ADC+SL correctly configured.



Maintenance alarm.
Preventive maintenance is requested.

10.7 Event log page

Date	Time	Status Code	Description	Resolution
13/12/16	08:30:00	S000	LOAD PROTECTED BY INVERTER	NO
31/12/16	08:31:05	S112	[1] IS AVAILABLE	YES
31/12/16	08:31:07	A032	RECTIFIER CRITICAL ALARM	YES
31/12/16	08:31:09	A064	PROGRAMMABLE A064	YES
16/01/17	12:25:00	A208	PROGRAMMABLE S079	YES
17/01/17	13:40:00	A176	ALL UNITS OR MODULES ARE AVAILABLE	YES
18/01/17	16:30:00	S000	LOAD PROTECTED BY INVERTER	NO
25/01/17	00:15:00	A016	BATTERY DISCONNECTED	YES
15/01/17	10:20:00	S000	LOAD PROTECTED BY INVERTER	NO
18/01/17	16:30:00	S096	[1] IS OPERATING	NO



Show STATUS events



Show ALARMS events




Show CONTROLS

10.8 Menu function descriptions

10.8.1 Entering passwords

Some operations and settings require a password in order to be performed.

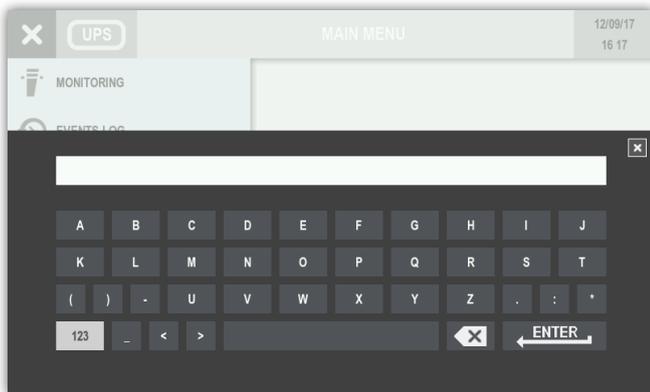

Wildcard covering of the password is active by default.
The default password is **SOCO**.

Press **ENTER** to confirm the selection or close the window to abort.

10.8.2 MONITORING menu

Submenu Alarm opens the alarm pages.

Submenu Status opens the status pages.

10.8.3 EVENTS LOG menu

This menu accesses the event log (Status and Alarms).

10.8.4 MEASUREMENTS menu

This menu displays all UPS measurements relating to the rectifier input stage, output stage, batteries, bypass input stage and inverter.

The pins on the bottom of the screen indicate whether or not there are more pages. Sliding to the right or left changes measurements page.

10.8.5 CONTROLS menu

This menu contains the commands that can be sent to the UPS. Some of them are password protected. If a command is not available, a COMMAND FAILURE message appears.

- **UPS PROCEDURE: START/ON MAINTENANCE BYPASS/STOP** see 'Operating procedures' chapter.
- **BATTERY: BATTERY CONTROL > BATTERY TEST:** this function checks whether or not test conditions are available and returns the results.
- **ECO MODE CONTROLS:** this function sets/resets the **ECO MODE**.
- **MAINTENANCE: Alarms reset:** this function clears the alarm history, **LED test:** this function activates LED flashing for a few seconds.

10.8.6 UPS CONFIGURATION menu

- **CLOCK:** this function sets the date and time.
- **COM-SLOTS:** this function configures the RS485 modbus serial link.
- **REFERENCES:** this function gives the possibility to customised the unit reference and the location.
- **REMOTE:** this function enables controls from remote devices through MODBUS protocol (NET VISION for example).

10.8.7 USER PARAM menu

This menu contains the different functions for users such as language, password, buzzer, display, preferences, touchscreen calibration.

10.8.8 SERVICE menu

This menu is reserved for support service personnel and holds UPS identification data and utilities for software upgrades.

- **UPS SETTINGS:** critical machine settings for output and backfeed. Some parameters cannot be modified when the UPS supplies the load by INVERTER or BYPASS.



Wrong configuration in UPS SETTINGS could damage the load or the batteries.


10.9 Additional user functions

10.9.1 Phase color modification

- Enter **MAIN MENU > USER PARAM > PREFERENCES**

For each phase is possible to select a specific colour in a set of colour range. Those colours are applying in the measurements pages.

Colour	Default colour
 Yellow	Phase 3
 Orange	
 Red	
 Green	
 Light blue	Phase 2
 Dark blue	
 Purple	Phase 1
 Brown	
 Light grey	
 Dark grey	
 Black	

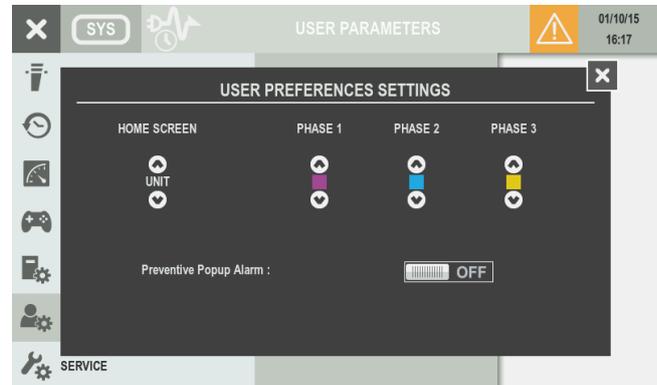

The popup alarm appears in case of critical alarms. This function can be extended to preventive alarms by switching “Preventive Popup Alarm” to ON.

11. OPERATING PROCEDURES

	NOTE: before carrying out any operations on the unit read the 'Safety standards' chapter carefully.
	NOTE: with the stop procedure the load will be disconnected.

11.1 Switching ON

- Connect the mains and auxiliary mains to the UPS.
- Switch **ON** input switch **Q1**.
- Wait until display switch on.
- Enter MAIN MENU > CONTROLS > PROCEDURES.

	NOTE: In parallel configuration the procedure must be performed from the system menu.
---	---

- Select START PROCEDURE and press **ENTER**.
- Carry out the operations indicated on the display.

11.2 Switching OFF

This operation interrupts the power supply to the load. The UPS and the battery charger will be shut down.

- Enter MAIN MENU > CONTROLS > PROCEDURES.

	NOTE: In parallel configuration the procedure must be performed from the unit menu.
---	---

- Select STOP PROCEDURE and press **ENTER**.
- Wait approx. 2 minutes for the UPS shutdown.

	NOTE: the controlled shutdown of each server connected to the LAN can be managed by shutdown software.
---	--

- Carry out the operations indicated on the display.

11.3 Bypass operations

Switching onto maintenance bypass

This operation creates a direct connection between the UPS input and output, excluding the equipment control part. This operation is performed in the event of:

- standard maintenance.
- serious failure has occurred.



WARNING! LOAD POWERED BY AUXILIARY MAINS: your load is exposed to mains disturbances.

- Enter MAIN MENU > CONTROLS > PROCEDURES.
- Select MAINT. BYPASS PROC. and press **ENTER**.
- Carry out the operations indicated on the display.



NOTE!
When an external manual bypass is present:

- carry out the procedure described above;
- close the external switch.

Switching on from maintenance bypass

- Put switch **Q1** into position **1** (mains ON).
- Wait for the display to switch on.
- Enter MAIN MENU > CONTROLS > PROCEDURES.



NOTE: In parallel configuration the procedure must be performed from the system menu.

- Select START PROCEDURE and press **ENTER**.
- Carry out the operations indicated on the display.



NOTE!
When an external maintenance bypass⁽¹⁾ is present, put the switch to position 0 (OFF).

1. Not monitored by the UPS or by the parallel system.

11.4 Extended out of service

When the UPS is deactivated for some time, the batteries must be recharged regularly. They should be recharged every three months.

- Check that output switches **Q3** and **Q5** are **OFF**.
- Connect the mains and auxiliary mains to the UPS.
- Switch **ON** input switch **Q1**.
- Wait until displays switch on.
- Enter MAIN MENU > CONTROLS > PROCEDURES.
- Select START and press ENTER.
- Carry out the operations indicated on the display.
- Close the external battery breaker/fuses.
- Wait until the batteries are fully charged. Check in the menu MAIN MENU > MEASUREMENTS > BATT MEASURES.
- Open the external battery breaker/fuses.
- Switch **OFF** input switch **Q1**.

11.5 Emergency shutdown

	NOTE! This operations interrupts the supply to the output load from both inverters and automatic bypass.
	If the UPS is operating from the maintenance bypass with the mains present, the emergency shutdown does not interrupt the power supply to the load. In emergency conditions all power supplies upstream of the UPS must be disconnected.

UPS power OFF

Put **Q3** to position 0 when it's necessary to interrupt the power supply quickly.

	WARNING! In parallel configuration open the system shutdown switch H .
	NOTE! This operations interrupts the supply to the output load from both inverters and automatic bypass.
	To restart the UPS, reset the alarm after the U.P.O activation.

Remote UPS power OFF

It is possible to interrupt the power supply to the output load using the ADC+SL card. Refer to 'Standard features and option' chapter.

12. OPERATING MODES

12.1 On line mode

A special feature of the UPS is the ONLINE double conversion in conjunction with low distortion mains power absorption. In ON LINE mode, the UPS can supply a voltage that is fully stabilised in frequency and amplitude, regardless of any interference in the mains power supply, within the most stringent classification of UPS regulations.

ON LINE operation provides three operating modes according to mains and load conditions:

- Inverter mode

This is the most frequent operating condition: energy is drawn from the primary mains power supply and converted and used by the inverter to generate the output voltage to power the connected loads.

The inverter is constantly synchronised in frequency with the auxiliary mains to enable load transfer (due to an overload or inverter shutdown) without any break in the power supply to the load.

The battery charger supplies the energy required to maintain or recharge the battery.

- Bypass mode

In the event of inverter failure, the load is automatically transferred onto the auxiliary mains without any interruption in the power supply.

This procedure may occur in the following situations:

- in the event of a temporary overload, the inverter continues to power the load. If the condition persists, the UPS output is switched on to the auxiliary mains via automatic bypass. Normal operation, which is from the inverter, returns automatically a few seconds after the overload disappears.
- when the voltage generated by the inverter goes outside the limits due to a major overload or a fault on the inverter.
- when the internal temperature exceeds the maximum value allowed.

- Battery mode

In the event of a mains failure (micro interruptions or extended power cuts), the UPS continues to power the load using the energy stored in the battery.

12.2 High efficiency mode

The UPS has a selectable, programmable economy operating mode (ECO MODE) that can increase overall efficiency by up to 99% for energy saving purposes. If the power supply fails, the UPS will automatically switch onto the inverter and continue to supply power to the load by drawing energy from the battery.

This mode does not provide perfect stability in frequency and voltage like the ON LINE mode. Therefore the use of this mode should be carefully evaluated according to the level of protection required by the application. With the optional board Net Vision specific daily or weekly time intervals can be selected and programmed to power applications directly from the auxiliary mains.

ECO MODE operation provides very high efficiency, since the application is powered directly from the auxiliary mains via the automatic bypass under normal operating conditions.

To activate follow the correct procedure in the control panel.

12.3 Converter mode

In converter mode the UPS can supply a fully stabilised sinusoidal output voltage with a different frequency from the input power line (50 Hz or 60 Hz is available as output frequency value).



**NOTE: only set this mode on UPS units with the auxiliary mains (AUXILIARY MAINS) disconnected!
Do not set this mode on UPS units with common mains lines as it could damage the load!**

12.4 Operation with maintenance bypass

If the internal maintenance bypass is activated using the appropriate procedure, the load is powered directly from the maintenance bypass, while the UPS is separated from the power supply and can be switched off.

This operating mode can be selected for maintenance to be carried out on the system, so that the necessary actions can be performed by service personnel without having to disconnect the power supply to the load.

12.5 Operation with motor generator (genset)

The UPS can be operated in conjunction with a generator (GENSET) over the ADC+SL card (refer to 'Standard features and option' chapter). With a generator, the frequency and voltage ranges of the auxiliary mains can be increased to accept the instability of the GENSET and at the same time to avoid operation from the battery or risks of out-of-synchronisation switching on to the bypass.

13. STANDARD FEATURES AND OPTION

Availability	
●	Factory-installed option
○	Available as option

Features	MASTERYS GP4		Note
	10-15-20 kVA	30-40 kVA	
Battery Option			
Additional charger	●○	●○	  Kit for Rectifier Neutral creation
Communication Option			
ACS card <i>(Automatic Cross Synchronisation)</i>	●○	●○	
ADC+SL card <i>(Advanced Dry Contact + Serial Link)</i>	○	○	
LIB-ADC <i>(Lithium Ion Battery interface)</i>	○	○	
Temperature sensor	○	○	  ADC+SL card
Touchscreen display	●	●	
Remote touchscreen display	○	○	  ADC+SL card
BACnet card	○	○	
Modbus TCP card	○	○	
Net Vision card	○	○	
EMD <i>(Environmental Monitoring Device)</i>	○	○	  Net Vision card
PROFIBUS protocol interface	○	○	  ADC+SL card
Electrical Option			
Parallel card	●○	●○	  Cold start
External maintenance bypass	○	○	
Kit for TN-C / Neutral-Ground connection	○	○	  Kit for Rectifier Neutral creation
Internal Backfeed Protection	●	●	
Kit For Common Mains	○ (3/3)	○	  Kit for Rectifier Neutral creation
Kit for Rectifier Neutral creation	●	●	  Kit for TN-C / Neutral-Ground connection  Kit For Common Mains  Additional charger
Redundant Bypass Ventilation	●	●	
Mechanical Option			
Ramp for UPS unloading	○	○	
Kit for Front and Lateral Cover	○	○	
Kit for IP21	○	○	
Seismic kit	●	●	
Other			
Cold start	●○	●○	  Parallel card

 Required option


 Incompatible option

13.1 ADC+SL card

The ADC+SL (Advanced Dry Contact + Serial Link) is a slot optional board that provides:

- 4 relays for external device activation (can be set as normally closed or normally open).
- 3 free inputs to report external contacts to UPS.
- 1 connector for external battery temperature sensor (optional).
- RS485 insulated serial link providing MODBUS RTU protocol.
- 2 LEDs indicating board status.

The board is plug&play: the UPS is able to recognise its presence and configuration. It is possible to create a custom operation mode through after sales service.

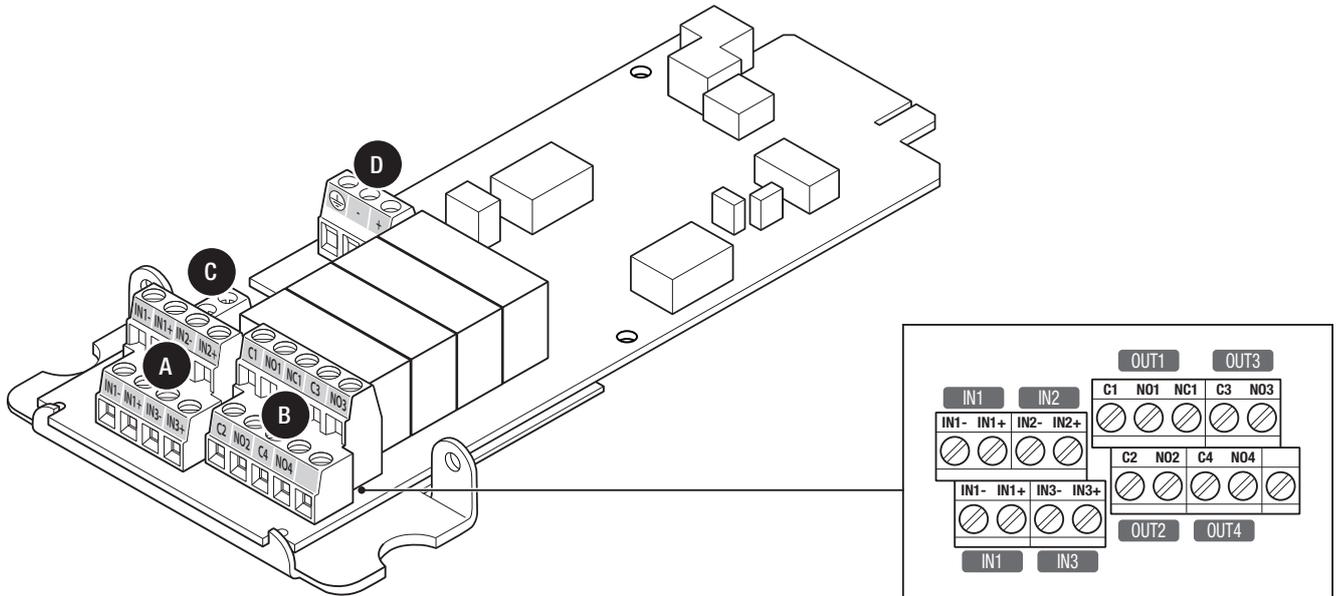

KEY

- | | |
|--|---|
| <p>A 3 free inputs to link external contacts to UPS.</p> <p>B 4 relays for external device activation.</p> | <p>C 1 connector for external temperature sensor.</p> <p>D RS485 insulated serial link.</p> |
|--|---|



NOTE!

If the board is removed while operating, an alarm is flagged on the control panel. Perform an "Alarm reset" control to cancel it.

Input

- Free voltage loop.
- INx+ has to be connected to INx- to close the loop on **A** connector.
- Inputs must be isolated with basic insulation from a primary circuit up to 277 V.
- IN1 is duplicated, giving the possibility to link the UPS POWER OFF signal to other equipment, for example.

Relay outputs

- Contact voltage guaranteed at 277 V (AC) / 25 V (DC) – 4 A (for higher voltage, please contact the manufacturer).
- Relay 1 gives the possibility of choosing between normally closed (NC1) or normally open (NO1) position. Relays 2, 3 and 4 only have normally open position (NOx).
- On connector **B**, Cx means common, NOx means normally open position.

Configuration 1 **STANDARD configuration (default)**

IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS [®]	Close to activate	Normally open
IN2	GEN SET ON	1	Activate S023 status	Open to activate	Normally closed
IN3	INSULATION FAULT	10	Activate A026	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	OPERATING ON BATTERY	30	Relating to A019		Normally open
RELAY 3	END OF BACK-UP TIME	10	Relating to A017		Normally open
	IMMINENT STOP	10	Relating to A000		Normally open
RELAY 4	LOAD SUPPLIED BY AUTO-MATIC BYPASS	10	Relating to S002		Normally open

Configuration 2 **OPTIONS SUPERVISOR configuration**

IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS [®]	Close to activate	Normally open
IN2	FAN FAILURE	10	Activate A054	Close to activate	Normally open
IN3	BATTERY DISCONNECTED	10	Activate A016	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	OPERATING ON BATTERY	30	Relating to A019		Normally open
RELAY 3	REDUNDANCY LOST	10	Relating to A006		Normally open
RELAY 4	BATTERY DISCONNECTED	1	Relating to A016		Normally open

Configuration 3 **SAFETY configuration**

IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS [®]	Close to activate	Normally open
IN2	INSULATION FAULT	1	Activate A026	Open to activate	Normally closed
IN3	CHARGER DISABLE/ENABLE	10	Command sent to UPS [®]	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	UPS POWER OFF	1	Relating to A059		Normally open
RELAY 3	END OF BACK-UP TIME	10	Relating to A017		Normally open
	IMMINENT STOP	10	Relating to A000		Normally open
RELAY 4	INSULATION FAULT	1	Relating to A026		Normally open

Configuration 4 **ENVIRONMENTAL configuration**

IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS [®]	Close to activate	Normally open
IN2	PROGRAMMABLE ALARM	10	Activate A064	Open to activate	Normally closed
IN3	BATTERY TEMPERATURE ALARM	10	Activate A020	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	BATTERY TEMPERATURE ALARM	10	Relating to A020		Normally open
RELAY 3	REDUNDANCY LOST	10	Relating to A006		Normally open
	OVERLOAD	10	Relating to A001		Normally open
RELAY 4	PROGRAMMABLE ALARM	10	Relating to A064		Normally open

Configuration 5 **EXTERNAL MAINTENANCE BYPASS configuration**

IN/OUT	DESCRIPTION	ACTIVATION DELAY (s)	REMARK ⁽¹⁾	INPUT TYPE	STATE
IN1	UPS POWER OFF	1	Command sent to UPS [®]	Close to activate	Normally open
IN2	GEN SET ON	1	Activate S023 status	Open to activate	Normally closed
IN3	EXTERNAL MAINTENANCE BYPASS CLOSED	10	Activate S018 status	Open to activate	Normally closed
RELAY 1	GENERAL ALARM	10	(NC1 or NO1 position can be chosen) Relating to A015		Normally open/closed
RELAY 2	OPERATING ON BATTERY	30	Relating to A019		Normally open
RELAY 3	END OF BACK-UP TIME	10	Relating to A017		Normally open
	IMMINENT STOP	10	Relating to A000		Normally open
RELAY 4	LOAD SUPPLIED BY AUTO-MATIC BYPASS	10	Relating to S002		Normally open

1. The acronyms mentioned are linked to MODBUS table (Snnn=Status/Annn=Alarm).
 2. A self-locking emergency push button must be used for the UPS Power Off input.
- Note: custom configuration is also available. For more information contact Socomec.

RS485 serial link

- Insulated RS485, protected against over voltage. Only for local bus purposes; maximum ~500 m.
- Pull up and pull down line resistor XJ1 (failsafe biasing): jumper open by default.
- Possibility of fixing the RS485 cable to the board.
- Cable type required: twister pair cable + shield to connect to ground. (AWG 24, 0.2 mm² for example).

The INPUT and RELAYS are managed with information coming from the UPS.



NOTE!

Inputs and relays can be re-programmed depending on requirements.
Contact your SOCOMEC after-sales service to change Input/Output programming.

Information coming from inputs can be reported in the UPS database for display on the mimic panel and is accessible on the MODBUS table.

The UPS can manage up to two ADC+SL option cards. The cards can be re-programmed for other uses.

In this specific case, the 2 serial links (SLOT 1 and SLOT 2) are independent.

Modbus serial link

The RS485 provides MODBUS RTU protocol.

The description of MODBUS addresses and UPS database are described in the MODBUS user manual. All manuals are available on SOCOMEC's web site (www.socomec.com).

Serial link settings

COM1 relates to serial port on board in SLOT 1.

COM2 relates to serial port on board in SLOT 2.

COM3 relates to serial port on board in SLOT 3.

Settings are available via the mimic panel to configure:

- Baud rate
- Parity
- MODBUS slave number

Board status

Board presence is reported through status S064 for slot 1, S065 for slot 2 and S068 for slot 3.

In the case of board failure, 'Option board alarm' (A062) occurs to prevent malfunctioning.

13.1.1 Temperature sensor

The temperature sensor can be used to monitor the battery temperature.

The ADC+SL card can be ordered with or without the temperature sensor in kit.


13.2 LIB-ADC CARD

The LIB-ADC (Lithium Ion Battery interface) is a slot optional board that provides:

- 4 relays for external device activation (can be set as normally closed or normally open)
- 3 inputs to report external contacts to UPS
- 1 connector for external temperature sensor (optional)
- RS485 insulated serial link providing MODBUS RTU protocol
- 4 leds indicating the board status and RS485 communication status

The input and output connections of this card are exclusively reserved for the LIB interface: they cannot be used for general purposes. Setting up the UPS and activation of the system must be done by qualified technicians.

Please contact the SOCOMEC service centre.

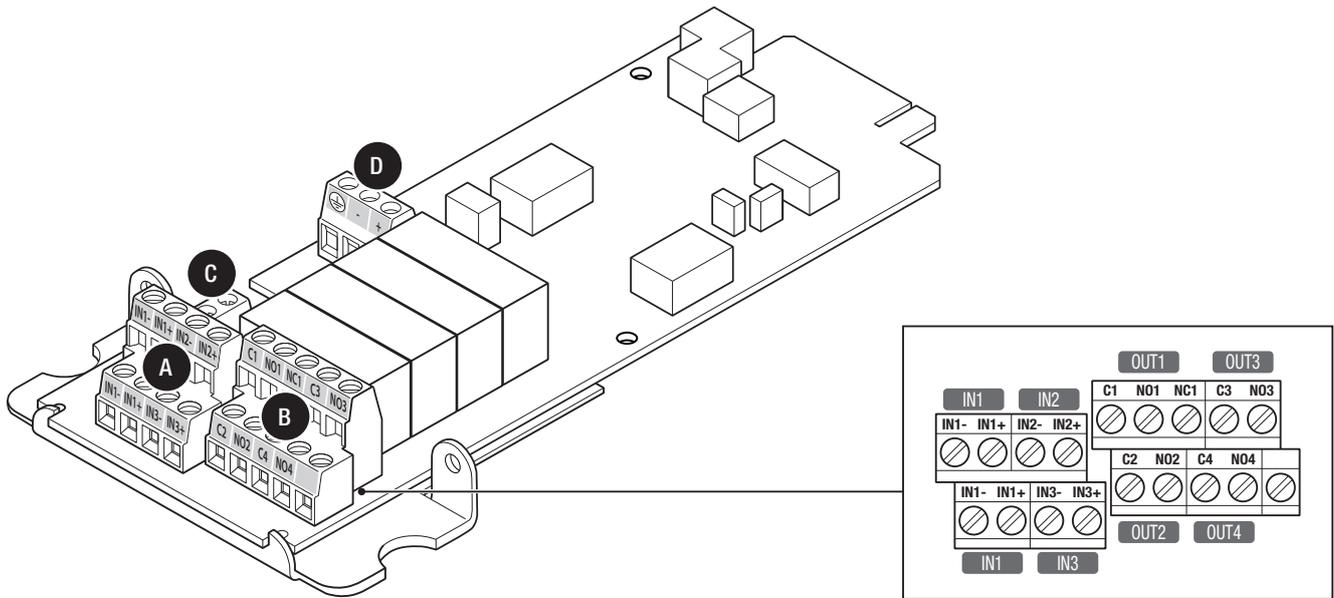

KEY

- | | |
|---|---|
| <p>A 3 inputs to link external contacts to UPS
XB4 (reserved for LIB interface)</p> <p>B 4 relays for external device activation
XB3 (reserved for LIB interface)</p> | <p>C 1 connector for external temperature sensor
XB2 (reserved for LIB interface)</p> <p>D RS485 insulated serial link
XB1 (reserved for LIB interface)</p> |
|---|---|


DESCRIPTION

- Auto detect of the BMS connected.
- Smart interface with LIB system, thanks to the serial connection.
- Easy connection and configuration.
- BMS data tunneling feature for building management system.

13.3 Net Vision card

NET VISION is a communication and management interface designed for business networks. The UPS behaves exactly like a networked peripheral, it can be managed remotely, and allows the shutdown of network workstations.


NET VISION allows a direct interface between the UPS and LAN network avoiding dependence on the server and support SMTP, SNMP, DHCP and many other protocols. It interacts via the web browser.

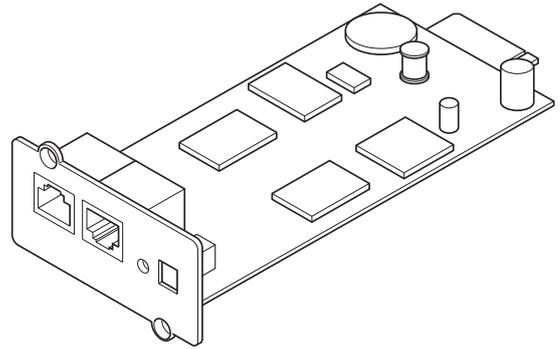

13.3.1 EMD

EMD (Environmental Monitoring Device) is a device to be used in conjunction with the NET VISION interface and provides the following features:

- temperature and humidity measurements + dry contact inputs,
- alarm thresholds configurable via Web browser,
- notification of environmental alarm via email and SNMP traps.

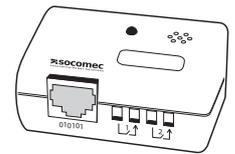


13.4 ACS card

ACS (Automatic Cross Synchronisation) card is used to receive a synchronisation signal from an external source and manage it for the UPS where it is installed, and provide a synchronising signal, where requested, to another UPS.


13.5 Modbus TCP card

With the MODBUS TCP card fitted in the options slot, the UPS can be monitored from remote stations using the appropriate protocol (MODBUS TCP - IDA).

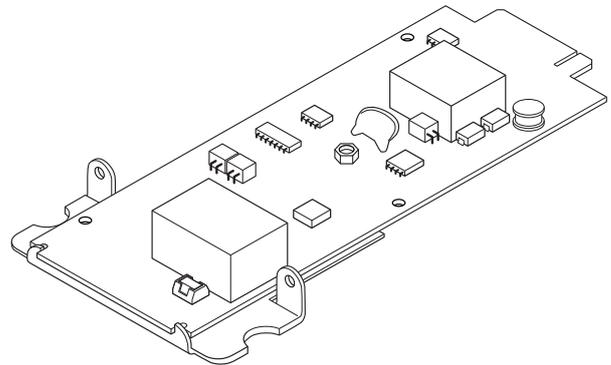


13.6 BACnet card

With the BACnet card fitted in the options slot, the UPS can be monitored from remote stations using the appropriate protocol (BACnet - IDA).

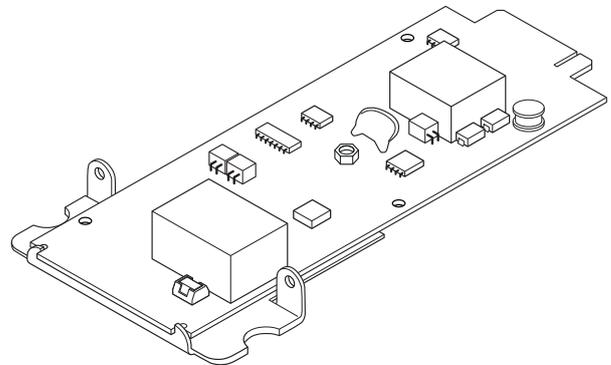


13.7 Touchscreen display

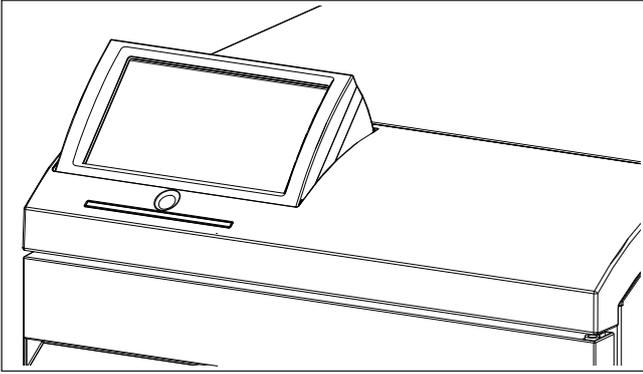

The display is designed for rugged industrial applications. The display is single-touch only (no double touch effects). Depending on pressure, the navigation tree and various functions will be executed.

13.8 Remote touchscreen display

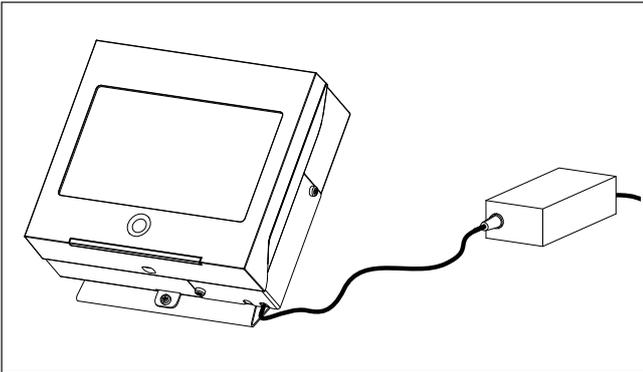

NOTE!

Available only with ADC+SL option card.

13.9 PROFIBUS protocol interface

Socomec UPS can be provided with an interface of PROFIBUS ® DP slave type for the UPS to be connected to a PROFIBUS ® PLC.

PROFIBUS ® protocol is aimed at exchanging data between input/output monitoring devices and a master unit.

The frame exchanged with the PLC only manages input data comprising a maximum of 255 bytes. Controls that are considered as output data are not managed by means of the PROFIBUS ® coupler.

13.10 Software option

Visit www.socomec.com and enter DOWNLOAD > SOFTWARE > UPS SOFTWARE to find the communication software suitable for your requirements.



NOTE!

Before performing any operations, check that the software is compatible with your UPS model.

13.11 Internal Backfeed Protection

Internal backfeed protection for Mains and Auxiliary Mains.

For further information contact SOCOMECC.

13.12 External maintenance bypass

The external maintenance bypass is designed to provide maximum system availability for critical equipment. It offers the possibility of transferring the load to an alternative power path allowing full isolation of the UPS. In this case the UPS can be turned off and removed without power interruption at the connected loads.

For further information contact SOCOMECC.


13.13 Kit For Common Mains



WARNING!

Cablings errors with inversion between phase and neutral conductors may cause permanent damage to the equipment.

Details

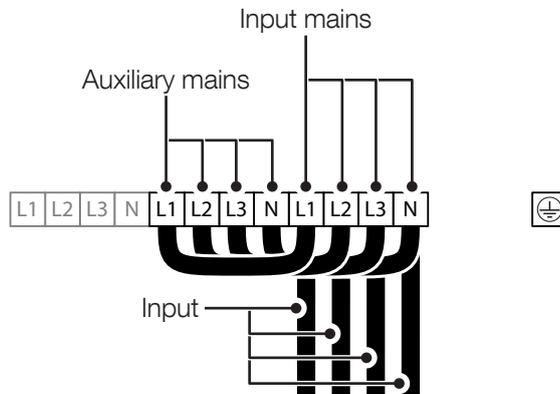

13.14 Kit for Rectifier Neutral creation

For three wire input mains (without neutral) a neutral kit is available as an option. The neutral kit does not change the type of grounding system and it does not create galvanic insulation.

The input mains neutral bar is not available.




The input mains and auxiliary mains must be separate.
The auxiliary mains must always have a neutral wire.
The auxiliary mains neutral wire must be galvanically isolated from the PE.

13.15 Kit for TN-C / Neutral-Ground connection

To deal with different plant needs, a connection bar between Neutral and Protection Earth is available as an option (see figure). For further information contact SOCOMEC.

	<p>The UPS does not ensure continuity of the neutral conductor. The output neutral must not be used as a PEN connection for the load.</p>
	<p>A PEN conductor is prohibited in the case of unbalanced and third harmonic current circulation.</p>

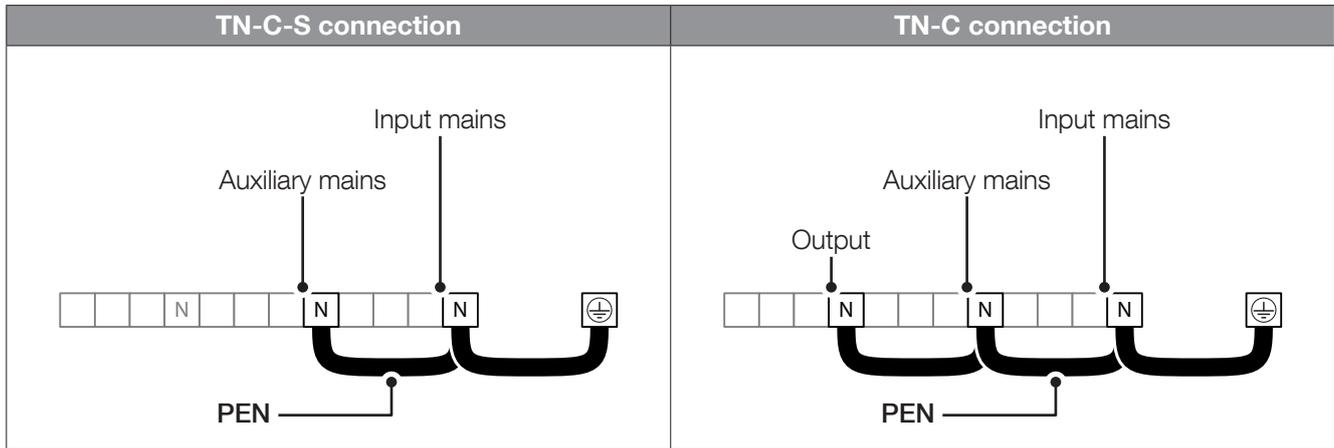


	<p>Use the same Neutral PEN section of the power connections.</p>
---	---


13.16 Redundant Bypass Ventilation

Redundant ventilation is available as an option to improve the reliability of the Bypass subset.
For further information contact SOCOMEC.

13.17 Ramp for UPS unloading

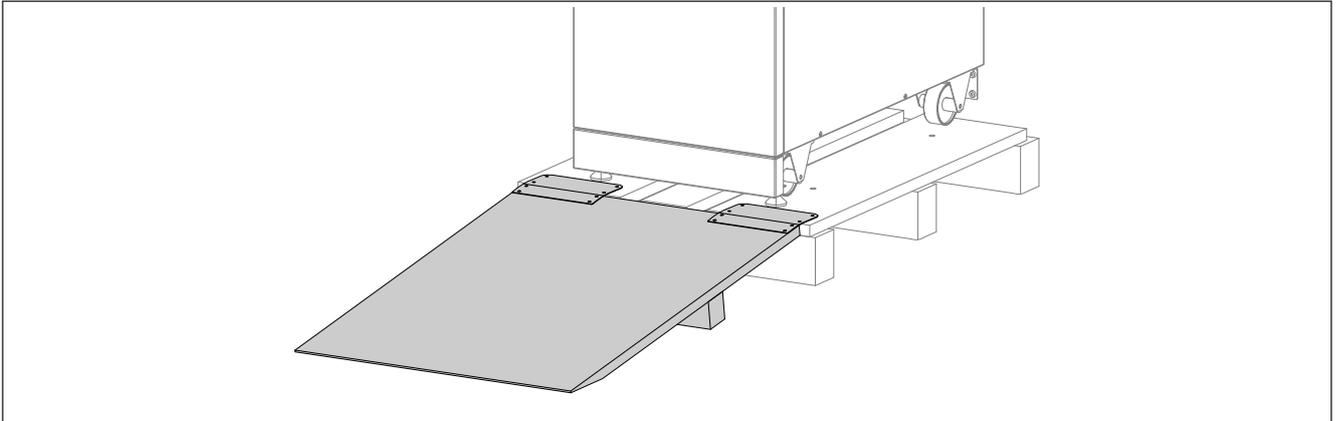

13.18 Kit for Front and Lateral Cover

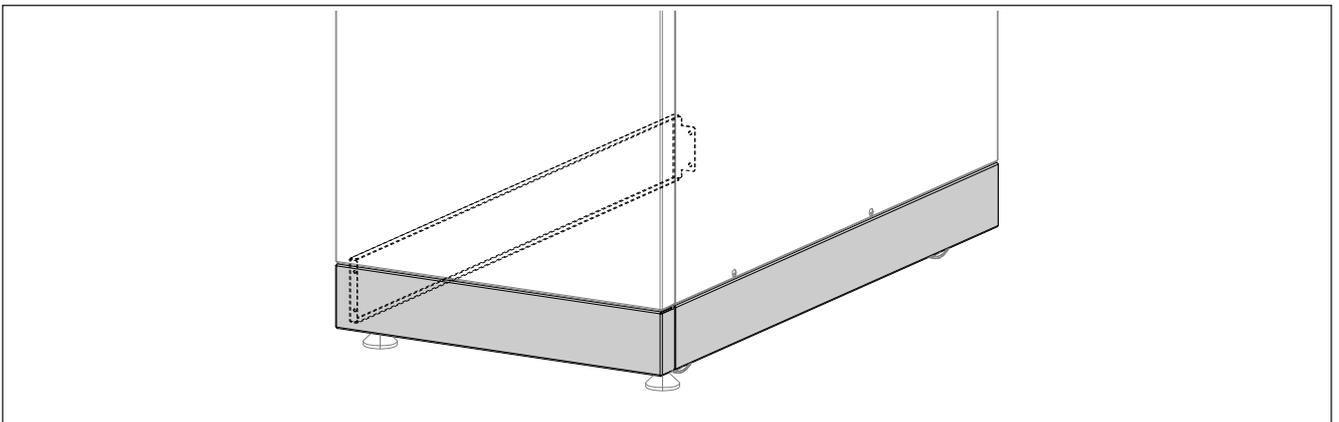

13.19 Seismic kit

The structure of the UPS is modified to allow it to operate in Zone 4 seismic activity installations (UBC-1997 Zone 4).

13.20 Cold start

During a prolonged mains failure the load is supplied by the UPS until the protection threshold is reached and the UPS switches off.

With the cold start option enabled, the user has 2 hours time to disconnect the non-essential load and restart manually the UPS (START PROCEDURE via HMI) directly in Stored Mode (battery mode) of operation (Cold Start) in order to supply the indispensable load by exploiting the available residual energy in batteries.

NO retry is possible after the first Cold Start procedure.



Note:

This option can only be used for single UPS setups, not parallel configurations.
For more information contact Socomec.

14. TROUBLESHOOTING

The alarm messages displayed enable immediate diagnosis.

Alarms are divided into two categories:

- Alarms relating to external UPS circuits: input mains, output mains, temperature and environment.
- Alarms relating to internal UPS circuits: in this case corrective action will be carried out by the After Sales Department.

The USB report makes it possible to have full information on what occurred. Refer to 'Menu' chapter.

For other alarms that may appear please contact the Service Dept.

14.1 System alarms

A000	IMMINENT STOP	An imminent stop is about to happen. In few minutes the UPS will be shut down. This can be caused by a critical alarm or a user request.
A001	OVERLOAD ALARM	The load is exceeding the UPS power specification. The machine will turn off. Reduce the load immediately.
A002	AMBIENT TEMPERATURE ALARM	Environmental temperature is too high. UPS functionality may be affected, if the condition last for prolonged time.
A003	TRANSFER LOCKED	The UPS is unable to transfer the load between bypass and inverter.
A004	TRANSFER IMPOSSIBLE	Bypass is not available.
A005	INSUFFICIENT RESOURCES	Some components are not operational.
A006	REDUNDANCY LOST	The redundant Unit is not available. Check individual unit alarms to locate which is excluded from the System.
A008	ECO MODE DISABLED BY UPS	Eco mode is disabled due to bypass failure.
A009	ENERGY SAVER DISABLED BY UPS	An event has occurred forcing the UPS to stop the energy saver function.
A012	MAINTENANCE ALARM	UPS needs routine maintenance. Please contact the Service Dept.
A013	REMOTE SERVICE ALARM	UPS needs immediate maintenance. Please contact the Service Dept.
A014	REMOTE SERVICE PREVENTIVE ALARM	A non-critical alarm is present. Please contact the Service Dept.
A015	GENERAL ALARM	An alarm is present.
A016	BATTERY DISCONNECTED	The battery is not connected to the UPS.
A017	BATTERY DISCHARGED	The Battery Charge Level is low and reached a warning threshold.
A018	END OF BACK-UP TIME	Supply from batteries is close to finishing.
A019	OPERATING ON BATTERY	The UPS is running on battery. Load is supplied by batteries.
A020	BATTERY TEMPERATURE ALARM	Battery temperature is greater than the threshold. If temperature is measured using ADC+SL, verify NTC is still connected, otherwise, check the internal UPS temperature.
A021	BATTERY ROOM ALARM	The battery cabinet temperature is too high.
A022	BATTERY TEST FAILED	The battery has failed the last battery test.
A026	INSULATION FAULT	There is an insulation problem with the plant. Verify input from ADC+SL.
A027	BATTERY ALARM	A battery alarm is present. Maximum recharging time at two levels, or slow discharging time protection has occurred.
A032	RECTIFIER CRITICAL ALARM	There is a problem with the rectifier. Please contact the Service Dept.
A033	RECTIFIER PREVENTIVE ALARM	There is a non-critical problem with the rectifier. Please contact the Service Dept.
A035	RECTIFIER INPUT SUPPLY NOT OK	The input mains supply is out of tolerance. Verify that the input voltage and frequency are within the UPS ratings.

A037	CHARGER CRITICAL ALARM	There is a problem with the battery charger. Please contact the Service Dept.
A038	CHARGER PREVENTIVE ALARM	Battery charger was blocked by a critical alarm, or Battery Voltage is too low after 16 hours of charging.
A040	INVERTER CRITICAL ALARM	There is a problem with the inverter. Please contact the Service Dept.
A041	INVERTER PREVENTIVE ALARM	There is a non-critical problem with the inverter. Check the fans are working properly. Please contact the Service Dept.
A043	INVERTER IMMINENT STOP	Imminent redundancy was lost due to overload, unit imminent stop, etc.
A046	PARALLEL BOARD CRITICAL ALARM	There is a problem with the Parallel Board. Please contact the Service Dept.
A047	PARALLEL BOARD PREVENTIVE ALARM	There is a non-critical problem with the Parallel Board. Please contact the Service Dept.
A048	BYPASS CRITICAL ALARM	There is a problem with the bypass. Please contact the Service Dept.
A049	BYPASS PREVENTIVE ALARM	There is a non-critical problem with the bypass. Please contact the Service Dept.
A050	BYPASS INPUT SUPPLY NOT OK	The auxiliary supply is out of tolerance. Verify that the input voltage and frequency are within the UPS ratings.
A051	PHASE ROTATION FAULT	The auxiliary mains is not connected properly. Please check phase connection order is correct.
A052	BYPASS BACK-FEED DETECTION	There is a backfeed problem with the bypass. Please contact the Service Dept.
A054	FAN FAILURE	Fan Failure can generate overheating. Please contact the Service Dept.
A055	ACS ALARM	Communication between ACS and Inverter is lost.
A056	MAINTENANCE BYPASS ALARM	Output and Maintenance ByPass switches are closed at the same time.
A057	INTERNAL BACKFEED DETECTION	There is a backfeed problem with the rectifier. Please contact the Service Dept.
A059	UPS POWER OFF	The UPO emergency input on ADC+SL has been activated.
A060	WRONG CONFIGURATION	UPS is not configured properly. Please check the configurations or contact the Service Dept.
A061	INTERNAL / COMMUNICATION FAILURE	The internal communication between UPS sub-system is lost. Please contact the Service Dept.
A062	OPTION BOARD ALARM	There is a communication problem with the option board. Please contact the Service Dept.
A063	SPARE PARTS NOT COMPATIBLE	Please contact the Service Dept.

14.2 System status

S002	LOAD SUPPLIED BY AUTOMATIC BYPASS	Load on bypass, supplied by auxiliary mains. Load not protected.
S018	EXTERNAL MAINTENANCE BYPASS CLOSED	External maintenance bypass input is closed.
S023	GEN SET ON	Genset input. Verify input from ADC+SL.
S064	CARD IN SLOT 1 PRESENT	
S065	CARD IN SLOT 2 PRESENT	

15. PREVENTIVE MAINTENANCE

	NOTE: before carrying out any operations on the unit read the 'Safety standards' chapter carefully.
	NOTE: any work carried out on the equipment must be performed by qualified technicians authorised by SOCOMEC.

Routine maintenance carried out annually is recommended in order to provide optimum operating efficiency and avoid equipment downtime.

Maintenance consists of thorough functionality checks on:

- electronic and mechanical parts;
- dust removal;
- battery inspection;
- software updating;
- environmental checks.

15.1 Batteries

The condition of the battery is fundamental to UPS operation.

During the operating lifetime of the battery, the UPS stores statistics on the conditions of use of the battery for analysis.

Expected battery lifetime is very much dependent on operating conditions:

- number of charging and discharging cycles;
- load rate;
- temperature.

	NOTE: batteries must only be replaced with batteries recommended or sold by the manufacturer. Batteries must only be replaced by qualified technicians.
	NOTE: used batteries must be placed in appropriate containers to avoid acid leakage. They should only be entrusted to a specialist waste disposal company.
	CAUTION: Do not dispose of batteries in a fire. The batteries may explode. Do not open or mutilate batteries. Released electrolyte is harmful to the skin and eyes. It may be toxic. A battery can present a risk of electric shock and burns by high short-circuit current. Failed batteries can reach temperatures that exceed the burn thresholds for touchable surfaces.
	NOTE: servicing of batteries should be performed or supervised by personnel knowledgeable about batteries and required precautions.
	NOTE: when replacing batteries, replace with the same type and number of batteries or battery packs.

15.2 Fans & capacitors

The lifespan of consumable parts such as fans and capacitors (AC and DC) depends on whether or not the use and environmental conditions (premises, usage or load type) are abnormal or harsh for the equipment.

It is advisable to replace consumables as follows⁽¹⁾:

Consumable part	Years
Fan	5
AC and DC capacitor	7

1. Based on operation of the unit according to the manufacturer's specification.

16. SAFEGUARDING THE ENVIRONMENT

Do not dispose of electrical appliances with normal waste, use separate collection facilities.

Follow local council waste regulations for proper disposal arrangements to reduce the environmental impact of waste electrical and electronic equipment or contact your local government for information regarding the collection arrangements available.

If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging health and wellbeing. Depleted batteries are considered as toxic waste. When battery replacement becomes necessary, only give rundown batteries to certified and licensed waste disposal companies. In accordance with local legislation, it is prohibited to dispose of batteries together with other industrial waste or household refuse.



The crossed-out trash bin symbol is placed on this product to encourage users to recycle components and units whenever possible. Please be environmentally responsible and recycle this product through your recycling facility at the end of its lifetime.



For any questions regarding the disposal of the product, contact local distributors or retailers.



In case of product with incorporated battery, please use the proper recycling.

17. TECHNICAL SPECIFICATIONS

Models		MASTERYS GP4				
		10 kVA	15 kVA	20 kVA	30 kVA	40 kVA
Input/Output phases	kVA	3/1 and 3/3			3/3	
Electrical specifications - Input						
3/1 - Mains voltage	Vin	3ph + N 400 Vac (-15/+15%) up to -40% @ 70% of nominal load				
3/3 - Mains voltage	Vin	3ph + N 400 Vac (-15/+20%) up to -40% @ 70% of nominal load				
Input frequency	Hz	40 - 70				
Input power factor		≥ 0.99				
Current distortion (THDi)		≤ 4%	≤ 3.5%	≤ 2%		
(@: Pn, Resistive load, Mains THDv ≤ 1%)						
Electrical specifications - External battery						
Battery voltage range	V bat	from ±160V ⁽³⁾ to ±260V ⁽⁴⁾ (from 16+16 to 19+19 battery blocks) from ±200V ⁽⁵⁾ to 340V ⁽⁶⁾ (from 20+20 to 24+24 battery blocks)				
Electrical specifications - Output						
Output voltage	V	1Ph+N 220/230/240 V ±1% 3Ph+N 380/400/415 V ±1% ⁽¹⁾		3Ph+N 380/400/415 V ±1% ⁽¹⁾		
Output frequency	Hz	50-60 Hz (selectable) ±0.01%				
Nominal apparent power	kVA	10	15	20	30	40
Nominal active power	kW	10	15	20	30	40
Overload (@ 25 °C; Vin > 380) ⁽²⁾	10 minutes	12.5	18.75	25	37.5	50
	1 minute	15	22.5	30	45	60
Crest factor		≥ 2.7				
Voltage distortion (THDv)		≤ 1% (@: Pn, Resistive load) ≤ 5% (@: Sn, non-linear load)				
Electrical specifications - Bypass						
Bypass input voltage	V	Nominal output voltage ±15% (±20% if GENSET is used)				
Bypass input frequency	Hz	50-60 ±2% selectable (±8% if GENSET is used)				
Environment						
Operating temperature	°C	0-40 (15-25 recommended)				
Storage temperature	°C	-5 to 50				
Relative humidity	%	up to 95% (condensation-free)				
Max. altitude	m	1000 (without derating)				
Acoustic noise (@ 70% Pn)	dB(A)	< 43				< 49
Cooling type		Air cooling				
Required cooling capacity	m ³ /h	240				360
Dissipated power max at Pn nominal condition	W	440	665	905	1485	2090
	kcal/h	378	572	778	1277	1797
	BTU/h	1501	2269	3088	5067	7131
Dissipated power max at Pn worst condition	W	490	750	1050	1550	2445
	kcal/h	421	645	903	1333	2102
	BTU/h	1672	2559	3582	5288	8342

Models				MASTERYS GP4				
				10 kVA	15 kVA	20 kVA	30 kVA	40 kVA
Standards								
Safety				EN/IEC 62040-1, AS 62040-1				
Type and performance				EN/IEC 62040-3, AS 62040-3				
EMC				EN/IEC 62040-2 ⁽⁷⁾ , AS 62040-2 ⁽⁷⁾				
Product certification				IECEE CB Scheme				
Product marks				CE - RCM ⁽⁸⁾ - EAC ⁽⁸⁾ - CMIM ⁽⁸⁾ - UKCA ⁽⁸⁾				
Protective class				Protective Class I				
Touch current				< 1 mA				
Protection level				IP20; IP21 (option)				
Mechanical characteristics								
Colour				RAL 7016				
Models	S	Dimensions	Width	mm	444			
			Depth	mm	800			
			Height	mm	800			
		Weight	kg	89 ÷ 294				
	M	Dimensions	Width	mm	444			
			Depth	mm	800			
			Height	mm	1400			
		Weight	kg	430 ÷ 630				

1. 360 V with $P_{out} = 90\% P_n$.
2. Initial Condition $P_{out} \leq 80\% P_n$.
3. @Battery Full Discharged. Conditions apply. Call SOCOMEC support service.
4. @Battery Full Charged. Conditions apply. Call SOCOMEC support service.
5. @Battery Full Discharged. Call SOCOMEC support service.
6. @Battery Full Charged. Call SOCOMEC support service.
7. With output cables shorter than 10m, only for the 10 kVA 3ph output models.
8. Depends on the production site. Consult the data plate on the equipment.

Socomec: our innovations supporting your energy performance

1 independent manufacturer

3,900 employees
worldwide

8 % of sales revenue
dedicated to R&D

400 experts
dedicated to service provision

Your power management expert



POWER
SWITCHING



POWER
MONITORING



POWER
CONVERSION



ENERGY
STORAGE



EXPERT
SERVICES

The specialist for critical applications

- Control, command of LV facilities
- Safety of persons and assets
- Measurement of electrical parameters
- Energy management
- Energy quality
- Energy availability
- Energy storage
- Prevention and repairs
- Measurement and analysis
- Optimisation
- Consultancy, commissioning and training

A worldwide presence

12 production sites

- France (x3)
- Italy (x2)
- Tunisia
- India
- China (x2)
- USA (x2)
- Canada

30 subsidiaries and commercial locations

- Algeria • Australia • Austria • Belgium • China
- Canada • Dubai (United Arab Emirates) • France
- Germany • India • Indonesia • Italy • Ivory Coast
- Netherlands • Poland • Portugal • Romania • Serbia
- Singapore • Slovenia • South Africa • Spain • Sweden
- Switzerland • Thailand • Tunisia • Turkey • UK • USA

80 countries

where our brand is distributed



Sales offices



552235B - EN 07.2023

HEAD OFFICE

SOCOMECC GROUP

SAS SOCOMECC capital 10 582 640 €
R.C.S. Strasbourg B 548 500 149
B.P. 60010 - 1, rue de Westhouse
F-67235 Benfeld Cedex
Tel. +33 3 88 57 41 41 - Fax +33 3 88 57 78 78
info.scp.isd@socomecc.com

www.socomecc.com



YOUR DISTRIBUTOR / PARTNER

100 years
OF SHARED ENERGY

socomecc
Innovative Power Solutions